



BKHD-1528NP-10L Motherboard

VER 1.0

Copyright Notice

©2025 Beikong Industrial Control. All rights reserved.

All trademarks, service marks, company names, and logos referenced in this manual are the property of their respective owners. Any use of these trademarks, service marks, company names, and logos without express written permission from Beikong Industrial Control or the respective trademark owners is strictly prohibited.

Responsibility Statement

This user manual and its contents, including text, images, charts, and other materials, are protected by copyright law and are the property of Beikong Industrial Control. Please be advised that without the written permission of Beikong Industrial Control, the manual may not be copied, distributed, displayed, modified, created as a derivative work, transmitted, or publicly performed or displayed in any way or form.

Beikong Industrial Control reserves the right to modify the product specifications, features, designs, or any related information mentioned in this user manual at any time without prior notice. Please be advised that any such modifications will take effect without further notice.

Any reproduction, modification, reprinting, transmission, or publication of the contents of this manual in any form without prior written permission from Beikong Industrial Control is strictly prohibited. Any violation of this statement may result in legal action and damages.

Safety Guide

To ensure optimal use of Beikong products, please review the user manual in its entirety. Before reviewing product-specific information, we kindly request that you carefully read the safety instructions.

Product Version Identification


The product version number can be found on the motherboard, where X.X represents a number. For example, if the version is indicated as [VER1.0], it signifies that the current version of the motherboard is 1.0. The BIOS interface homepage provides information such as [XXXXNP-XXXX], which denotes the BIOS version number utilized by the current product. When updating the motherboard's BIOS, driver, or referencing other technical documents, please refer to the product version label for the most up-to-date information.


Catalog

Copyright Notice	1
Responsibility Statement	1
Safety Guide	1
Product Version Identification	1
Product Images	3
Product Profile	5
Motherboard Specifications	6
Motherboard Installation	7
Memory Installation	8
Motherboard Interface & Pin Description	9
Jumper Setting	12
AUTO_ON Jumper Setting (AUTO_ON)	12
ME Flashing Selection Jumper (J_ME)	12
Motherboard Pin Definition	13
SATA Data	13
SATA PWR	13
Serial Port (COM)	14
Front panel pin (F_PANEL)	14
USB Expansion pin (F_USB)	15
Programmable input and output port (J_GPIO)	15
Cooling fan power socket(SYS_FAN/CPU_FAN/FAN)	16
SIM card slot (SIMB)	16
ATX Power Connector (DC power supply)	16
BIOS User Guide	17
BIOS Description	17
BIOS Settings	18
Common fault analysis and solutions	19
Useful Links	20

Product Images

Please be advised that products manufactured in different batches may exhibit slight variations in appearance. To ensure the most accurate representation, please refer to the actual received goods.

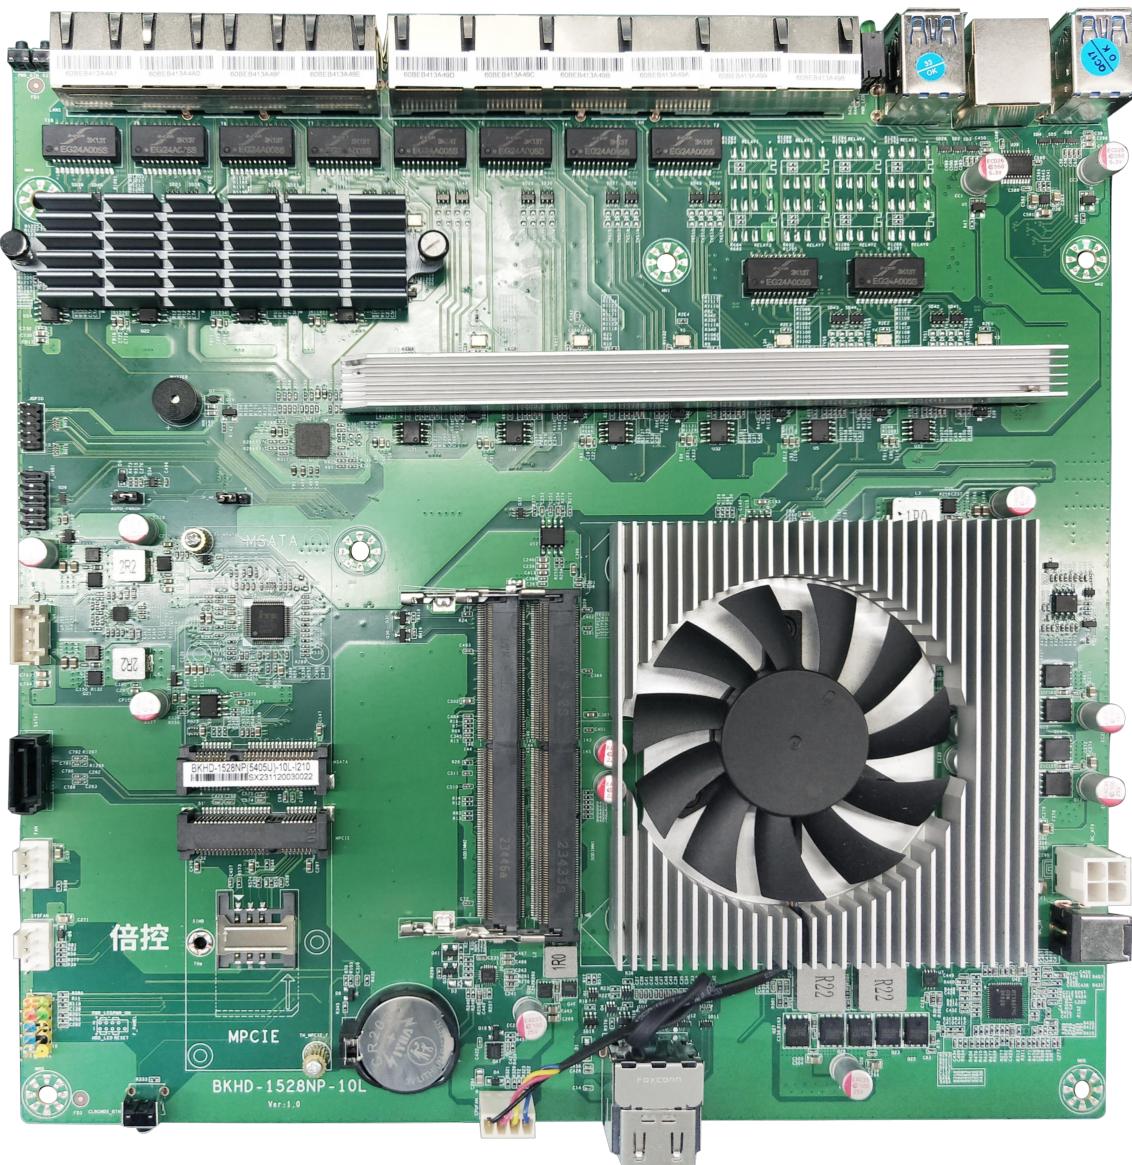

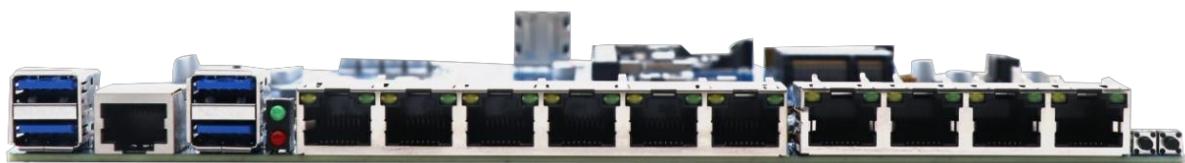

Product Profile

The 1528NP-10L is a high-performance network motherboard designed around Intel 8th- and 10th-generation Core processors. The front panel provides 10x RJ45 Gigabit Ethernet ports. It supports dual-channel DDR4 memory and offers expandable interfaces along with reliable industrial-grade specifications, making it an ideal core platform for building next-generation network appliances, edge computing servers, and high-end dedicated systems.

Main features:

Designed for Complex Network Topologies

Equipped with 10x 1GbE RJ45 ports powered by Intel I210 Ethernet controllers, the board delivers exceptional port density, outstanding throughput, and ultra-low CPU utilization. It is optimized for applications such as multi-WAN routers, high-end firewalls, VPN gateways, network monitoring probes, and software-defined networking (SDN) switching nodes, enabling efficient handling of massive packet forwarding and complex policy processing.

Powerful Computing Platform

Supports Intel 8th and 10th Generation Core processors (FCBGA1528 package), offering strong multi-core computing performance and excellent power efficiency. With dual-channel DDR4 SO-DIMM memory support up to 64GB, it balances high single-thread performance with efficient multitasking, making it well suited for high-concurrency network forwarding and service workloads. Integrated Intel UHD Graphics supports dual HD display outputs, ideal for monitoring walls or dual-display management scenarios.

Versatile Expansion Interfaces

Provides one SATA 6Gb/s interface and one mSATA interface to accommodate high-speed system and data storage requirements. A full-size mPCIe slot (USB 2.0 signal) with a reserved SIM card slot enables easy integration of cellular communication modules and industry-specific expansions.

Rich Onboard Connectivity

Features onboard GPIO pin headers, USB, and COM expansion headers, facilitating system integration and debugging. These interfaces enable deep connectivity for industrial applications such as IoT sensing, device control, and automation systems.

Industrial-Grade Reliable Design

Supports a wide operating temperature range of -20°C to 55°C, ensuring stable operation in harsh industrial and outdoor environments. Equipped with CPU and system fan headers to maintain reliable thermal performance under high workloads. Supports dual power input options, including a standard ATX 12V 4-pin connector or DC 12V input, providing flexible and dependable power delivery.

Motherboard Specifications

Processor	Product Collection	8th Gen / 10th Gen Intel Core processors
	Sockets Supported	FCBGA1528
Memory specifications	Memory Type	DDR4 SO-DIMM
	Maximum Capacity	2x 32GB
	Maximum Frequency	2400/2666 MT/s
Storage specifications	SATA	1*SATA 6Gb/s
	mSATA	1*mSATA
Network features	Ethernet	10*1GbE
	Controller	10*Intel I210
Extension interface	mPCIe	1*mPCIe (USB2.0 signal)
Display functions	Port	2*HD 1.4
	Chip	Intel UHD Graphics
	USB	2*USB-A 3.0
	Console	1*RJ45 COM-RS232
Backplane I/O	Ethernet	10*RJ45
	Button	1*Power button, 1*Reset button, 1*Clear CMOS button
	Power supply	1*Jack DC 5.5/2.5mm
	SATA	1*SATA Data connector/1*SATA Power socket
	SIM	1*SIM Card slots
Onboard I/O	Fan	1*CPU_FAN, 1*SYS_FAN
		1*F_PANEL
	Pins	1*J_COM
		1*F_USB 2.0 (can expand 2x USB2.0 ports)
		1*J_GPIO
Power supply mode	Power	1*ATX 12V 4-pin Connector or 1*Jack DC 12V
Motherboard size	Specification	230*230 (mm)
Work Environment	Temperature	-20~55°C
	Humidity	5%~90% (Relative humidity, no condensation)


Motherboard Installation

Safety Note

- Please do not remove the serial number and agent warranty sticker from the motherboard prior to installation. Doing so may affect the product's warranty recognition standard.
- Prior to installing or removing the motherboard or other hardware devices, please ensure that the power is turned off and the power cord is unplugged from the socket.
- When installing additional hardware devices on the motherboard interfaces, please ensure that the connectors and sockets are securely fastened.
- When handling the motherboard, please avoid contact with the metal wiring components to prevent the risk of short circuits.
- It is recommended that an anti-static wrist strap be worn when handling the motherboard, central processing unit (CPU), or memory. In the absence of an anti-static wrist strap, it is advisable to ensure that your hands are dry and to touch a metal object first in order to eliminate static electricity.
- Before installing the motherboard, we kindly request that place it on an antistatic mat or in an antistatic bag.
- Make sure the power adapter is turned off before unplugging the motherboard power connector.
- Before turning on the power, make sure the voltage of the adapter is within the standard voltage range.
- Before turning on the power, make sure all hardware device cables and power cords are properly connected.
- Do not allow the fixing screws to collide with the circuits or parts on the motherboard to avoid damage or malfunction of the motherboard.
- Make sure there are no loose screws or metal parts on the motherboard or inside the computer case before using the unit.
- Please secure the computer host in a stable location before starting the device.
- To prevent system failure, do not place the unit in an environment where the temperature is excessive.
- Turning on the power before installation is complete may damage the motherboard, other equipment, or yourself.
- If you are unfamiliar with how to perform the installation, or if you have any technical problems using this product, please contact a professional technician.

Memory Installation

The motherboard provides DDR4 SODIMM memory slot.

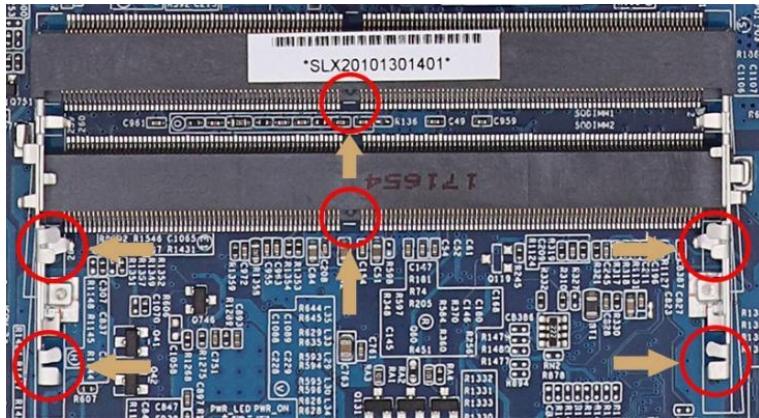

Before installing memory:

1. Please confirm that the memory you purchased is compatible with the specifications supported by this motherboard.
2. Before installing or removing the memory, please make sure that the power of the computer is turned off to avoid damage.
3. The memory design has a foolproof mark. If you insert the memory in the wrong direction, the memory cannot be installed. Please change the direction.


When installing memory:

1. Before installing or removing memory, please turn off the power and unplug the power cord.
2. Carefully hold the two ends of the Memory Stick and do not touch the metal contacts on the Memory Stick.
3. Align the metal contacts of the memory with the memory slot, making sure that the concave hole is aligned with the convex point of the upper slot.
4. Insert the memory into the slot at an angle of 30 degrees, then press the Memory Stick down until you hear a "click," indicating that the memory has been successfully installed and is ready to use. (Note: Do not press the Memory Stick too hard to avoid damaging the memory).
5. To remove the Memory Stick, push out the tabs at both ends of the memory slot simultaneously, and then remove the Memory Stick.


To remove the memory:

Use two fingers to push the latches at either end of the slot outward, the memory will pop up, then remove the memory.

Motherboard Interface & Pin Description

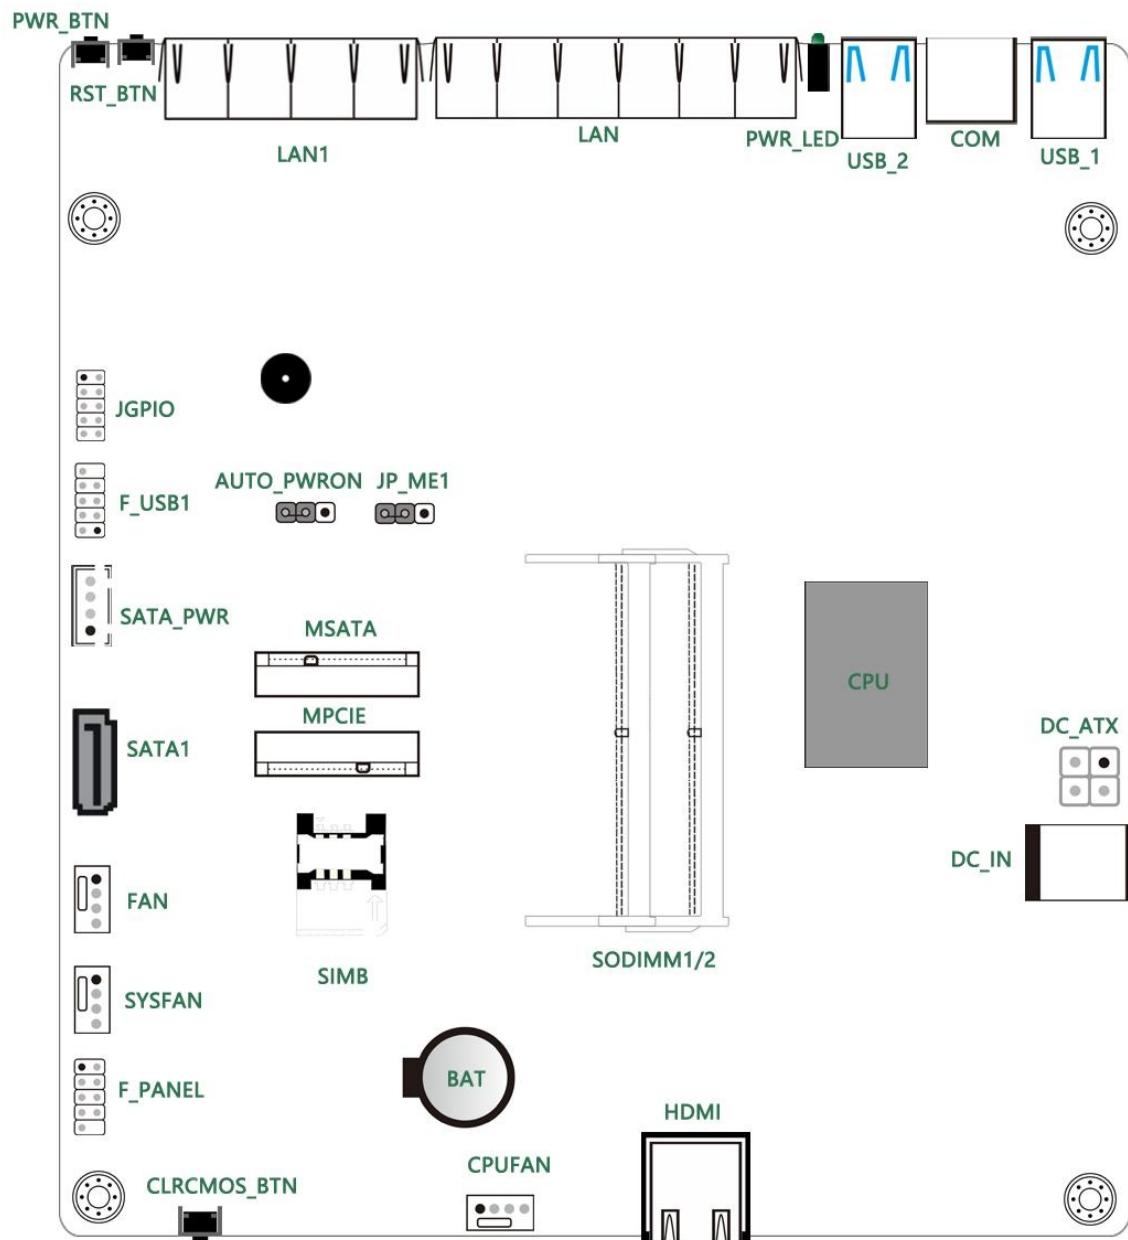

Item	Describe
JGPIO	General purpose input/output pins
F_USB 1	Can be used to expand USB2.0 ports
AUTO_PWRON	Jumper to enable or disable Auto Power-On
JP_ME 1	ME flashing selection jumper
SATA	SATA HDD/SSD data connectors
SATA_PWR	SATA HDD/SSD power socket
MSATA	mSATA SSD slot
MPCIE	mPCIe slot
SODIMM 1/2	DDR4 SO-DIMM memory slot (RAM)
DC ATX	ATX 12V 4-pin Connector
CPU_FAN	For CPU fan power supply
SYS_FAN/FAN	System fan, used to install chassis fan
SIMB	SIM card slot
F_PANEL	Motherboard function pin, used to connect chassis button
BAT	The CMOS battery (CR2032 lithium coin cell battery) on a motherboard

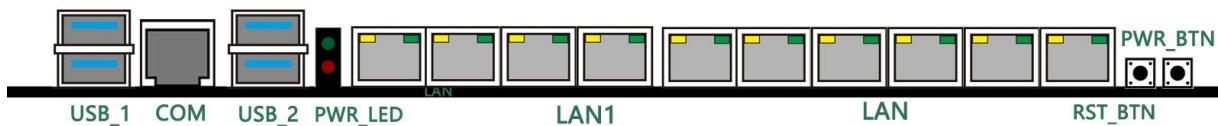

Item	Describe
USB_1/2	Double-layer USB-Type-A 3.0 port
COM 1	RJ45 port for COM RS232 standard
PWR_LED	LED indicator: Green light for power, Red light for hard disk
LAN 1-10	RJ45 Ethernet port for LAN/WAN Link LED: Green and solid, indicating the network is connected Active LED: Orange flashing, indicating data transmission
RST_BTN	Reset Button
PWR_BTN	Button to turn the device ON or OFF
DC_IN	Jack DC 5.5/2.5mm Power connector, 12V
CLR_CMOS_BTN	Button for clearing CMOS settings
HDMI	Double-layer HDMI display ports

Jumper Setting


Before installing the hardware device, you can set the corresponding jumpers according to your needs based on the following table.

To identify the first pin of a jumper or connector

Look at the marking next to the jumper or connector. The triangle symbol "▲" or "1" or a bold line indicates the first pin; check the pad on the back of the motherboard. The square pad is the first pin. When connecting the connector to the device, be careful to distinguish the first pin. Mixing the pins will damage the motherboard.

2-pin headers: Insert a jumper cap into both pins turns them off (short).

3-pin headers: Insert a jumper cap into pins 1-2 or pins 2-3 to off (short) them.

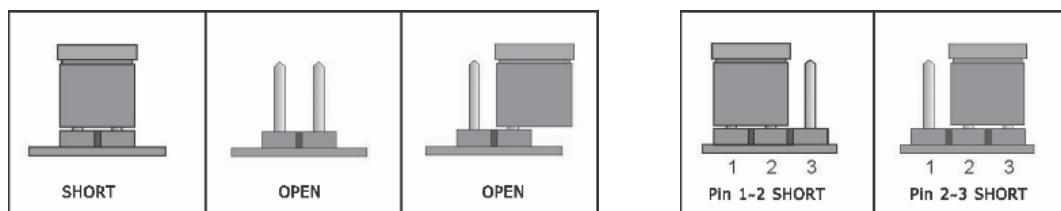

AUTO_ON Jumper Setting (AUTO_ON)

Image	Status	Setting
	1-2	Automatic power on (Default)
	2-3	Normal

ME Flashing Selection Jumper (J_ME)

Image	Status	Setting
	1-2	Disable
	2-3	Enable (Default)

Motherboard Pin Definition


SATA Data

The motherboard provides 7-pin SATA data socket

Image	PIN	Definition	PIN	Definition
	1	GND	2	SATA_TXP
	3	SATA_TXN	4	GND
	5	SATA_RXN	6	SATA_RXP
	7	GND		-

SATA PWR


The motherboard provides SATA power socket (1*4-pin, 2.54 mm pitch)

Image	PIN	Definition
	1	+12V
	2	GND
	3	GND
	4	+5V

Tip: The 1st pin of the SATA_PWR hard disk power supply interface is +12V output, and the 4th pin is +5V output.

Serial Port (COM)

The motherboard provides RJ45 COM port

Image	PIN	Definition	PIN	Definition
	1	RTS#	2	DTR#
	3	TXD	4	N/A
	5	GND	6	RXD
	7	DSR#	8	CTS#

Front panel pin (F_PANEL)

The motherboard provides F_PANEL pins (2*5-pin, 2.54 mm pitch, 10th pin is empty)

Image	PIN	Definition	PIN	Definition
	1	HDD_LED+	2	PWR_LED+
	3	HDD_LED-	4	PWR_LED-
	5	GND	6	GND
	7	RESET	8	PWR_ON
	9	GND		

USB Expansion pin (F_USB)

Before connecting the USB expansion board, be sure to turn off the computer and unplug the power cord from the socket to avoid damaging the USB expansion board.

The motherboard provides F_USB pins (2*5-pin, 2.54 mm pitch, 9th pin is empty)

Image	PIN	Definition	PIN	Definition
	1	+5V	2	+5V
	3	USB1_DATA-	4	USB2_DATA-
	5	USB1_DATA+	6	USB2_DATA+
	7	GND	8	GND
			10	/

Programmable input and output port (J_GPIO)

The motherboard provides GPIO pins (2*5-pin, 2.00 mm pitch)

Image	PIN	Definition	PIN	Definition
	1	GND	2	VCC
	3	GPIO 1	4	GPIO 5
	5	GPIO 2	6	GPIO 6
	7	GPIO 3	8	GPIO 7
	9	GPIO 4	10	GPIO 8

Cooling fan power socket(SYS_FAN/CPU_FAN/FAN)

The motherboard provides Cooling fan pins (1*4-pin, 2.54mm pitch)

Image	PIN	Definition
	1	Ground
	2	+12V
	3	FAN_TACH
	4	FAN_PWM

FAN sockets do not support temperature-controlled speed adjustment.

SIM card slot (SIMB)

The motherboard provides SIM card slot (on the back) for installing an LTE SIM card.



Note: When inserting the SIM card, make sure the chip is facing downwards (the chip faces the motherboard).

ATX Power Connector (DC power supply)

Before plugging the power supply into the power outlet, make sure the power supply is turned off and all devices are properly installed. The power outlet has a foolproof design; ensure the correct orientation before plugging it in.

(**Do not** use it and the panel's DC IN connector to power the motherboard at the same time.)

Image	PIN	Definition
	1	Ground
	2	Ground
	3	+12V
	4	+12V

BIOS User Guide

BIOS Description

This motherboard uses AMI BIOS. BIOS stands for (Basic Input Output System). It is a set of programs stored on a ROM (Read Only Memory) chip on the computer's motherboard. It stores the computer's most important basic I/O programs, the power-on self-test program, and the system startup program. It can read and write specific information about system settings from the CMOS. Its primary function is to provide the most basic and immediate hardware settings and control for the computer.

When you turn on your computer, the BIOS is the first program to run. It has the following main functions:

- The Power-On Self-Test (POST) checks whether the computer is functioning properly.
- It initializes and tests some external devices and loads your operating system.
- It provides the lowest-level, most basic control of your computer hardware.
- You manage your computer through the SETUP function in the BIOS.

The BIOS data is stored in a CMOS/R RAM chip on the motherboard, maintained by a 3.3V button battery. It contains important system information and the BIOS Setup program for setting system parameters. When the system is operating normally, the BIOS does not need to be modified. However, if the CMOS data is lost due to other reasons, the BIOS must be reset.

Note:

Incorrect BIOS settings can directly damage the computer hardware and even burn out the motherboard. Those unfamiliar with the system are advised to modify the settings with caution. Because the motherboard BIOS is constantly being updated, the BIOS information in this manual is for reference only. We cannot guarantee that the BIOS information in this manual will be consistent with the actual BIOS information on the motherboard.

BIOS Settings

When the motherboard is powered on or the system is restarted, the following prompt will appear on the display screen in the Post interface. Press "DEL" on the keyboard to enter BIOS Setup.



If this message disappears before you respond, you can press <Ctrl> + <Alt> + at the same time to restart the computer, or shut down and then restart the computer, or press the power button on the case to restart the computer.

Keyboard keys	Functional Description
← / →	Move the Left and Right arrows to select the screen.
↑ / ↓	Move the Up and Down arrows to select the item.
+ / -	Increase/Decrease value or Change selection
<Enter>	Select, Confirm this option or Enter the submenu
<ESC>	Return to Main page, or End the setup process from Main page
<F1>	Show related Help instructions
<F2>	Restore previous settings
<F9>	Load the optimized settings (BIOS defaults)
<F10>	Save the changed settings and reboot

Common fault analysis and solutions

We have compiled some frequently asked questions for your reference. Please check
<https://bkminipc.com/frequently-asked-questions-and-answers/>

Error	Inspection Method
Unable to start after power on	<p>Make sure the power cord is properly connected.</p> <p>Make sure that the power supply you are using meets the power supply requirements of the motherboard.</p> <p>Try to reinsert the Memory Stick.</p> <p>Try to replace the Memory Stick.</p> <p>Try to clear the CMOS of the main board.</p> <p>Please confirm if there is an external expansion card and if it is normal after removing the external card.</p>
Unable to display after power on	<p>Make sure the monitor is turned on.</p> <p>Make sure the monitor and host power cables are properly connected. Make sure the monitor and host cables are properly connected.</p> <p>Check to see if the monitor is in "Sleep" mode.</p> <p>Try changing the monitor interface or replacing the monitor.</p>
BIOS Setup cannot be saved	<p>Check that the CMOS battery is installed</p> <p>Try to replace the CMOS battery (CR2032)</p> <p>Adjust the time and date in BIOS setup</p>
Unable to find a bootable device	<p>Make sure the drive's power and data cables are properly connected.</p> <p>Make sure the operating system is installed on the drive.</p> <p>Make sure the hard drive is not physically damaged.</p>
Blue screen or freeze when logging on to the system	<p>Check if the Memory Stick and External Card are loose.</p> <p>Try removing the newly installed hardware and uninstalling the newly installed driver or software.</p> <p>Try replacing the memory with a different specification.</p>
Slow entry into the operating system	<p>Check if the CPU cooling fan is running normally.</p> <p>Check if the remaining space of the system partition is insufficient.</p> <p>Use software to check for bad sectors on the hard drive.</p>
System restarts automatically	<p>Confirm that the CPU cooling fan is rotating normally.</p> <p>Confirm that the switch/reset button has not been accidentally touched.</p> <p>Confirm that the Memory Stick and external card are loose.</p> <p>Confirm that the power supply has sufficient load capacity, try to replace the power supply</p> <p>Check if the system is infected with viruses.</p>
Unable to detect USB device	<p>Confirm that the USB device requires separate power.</p> <p>Confirm that the USB interface has poor contact.</p> <p>Confirm that the USB controller is enabled in the BIOS setup.</p>

Useful Links

Submit your suggestions and ideas in the community	https://www.reddit.com/r/bkminipc/	
Watch our new product demos	https://www.youtube.com/@BKHD-PCs	
Corporate News and Cooperation	https://www.linkedin.com/company/beikong/	
Get our latest news on Meta	https://www.facebook.com/people/%E5%80%8D%E6%8E%A7/61558406109357/	