



BKHD-1310NP-6L4S Motherboard

VER 1.0

Copyright Notice

©2025 Beikong Industrial Control. All rights reserved.

All trademarks, service marks, company names, and logos referenced in this manual are the property of their respective owners. Any use of these trademarks, service marks, company names, and logos without express written permission from Beikong Industrial Control or the respective trademark owners is strictly prohibited.

Responsibility Statement

This user manual and its contents, including text, images, charts, and other materials, are protected by copyright law and are the property of Beikong Industrial Control. Please be advised that without the written permission of Beikong Industrial Control, the manual may not be copied, distributed, displayed, modified, created as a derivative work, transmitted, or publicly performed or displayed in any way or form.

Beikong Industrial Control reserves the right to modify the product specifications, features, designs, or any related information mentioned in this user manual at any time without prior notice. Please be advised that any such modifications will take effect without further notice.

Any reproduction, modification, reprinting, transmission, or publication of the contents of this manual in any form without prior written permission from Beikong Industrial Control is strictly prohibited. Any violation of this statement may result in legal action and damages.

Safety Guide

To ensure optimal use of Beikong products, please review the user manual in its entirety. Before reviewing product-specific information, we kindly request that you carefully read the safety instructions.

Product Version Identification



The product version number can be found on the motherboard, where X.X represents a number. For example, if the version is indicated as [VER1.0], it signifies that the current version of the motherboard is 1.0. The BIOS interface homepage provides information such as [XXXXNP-XXXX], which denotes the BIOS version number utilized by the current product. When updating the motherboard's BIOS, driver, or referencing other technical documents, please refer to the product version label for the most up-to-date information.

Catalog

Copyright Notice	1
Responsibility Statement	1
Safety Guide	1
Product Version Identification	1
Product Images	3
Product Profile	4
Motherboard Specifications	5
Motherboard Installation	7
Memory Installation	8
Jumper Setting	9
CLR_CMOS Jumper Setting	10
JAT_ATX Jumper Setting	10
Motherboard Pin Definition	11
SATA Data	11
SATA PWR	11
Front panel pin: F_PANEL	12
Serial Port (COM)	12
USB Expansion pin: F_USB	14
Cooling fan power socket: SYS_FAN, CPU_FAN	14
VGA Expansion pin: J_VGA	15
PS/2 Keyboard and Mouse	15
J_GPIO 1	16
J_CPLD 1	16
Network indicator: LAN_LED	17
ATX Power Connector (DC power supply)	18
BIOS User Guide	19
BIOS Description	19
BIOS Settings	20
Common fault analysis and solutions	21
Useful Links	22

Product Images

Please be advised that products manufactured in different batches may exhibit slight variations in appearance. To ensure the most accurate representation, please refer to the actual received goods.

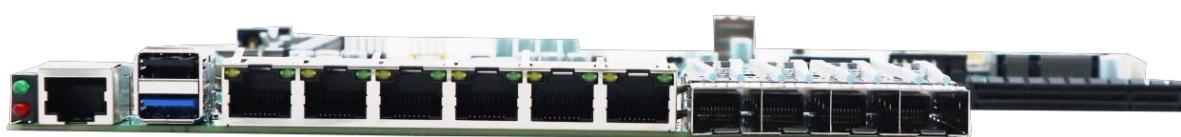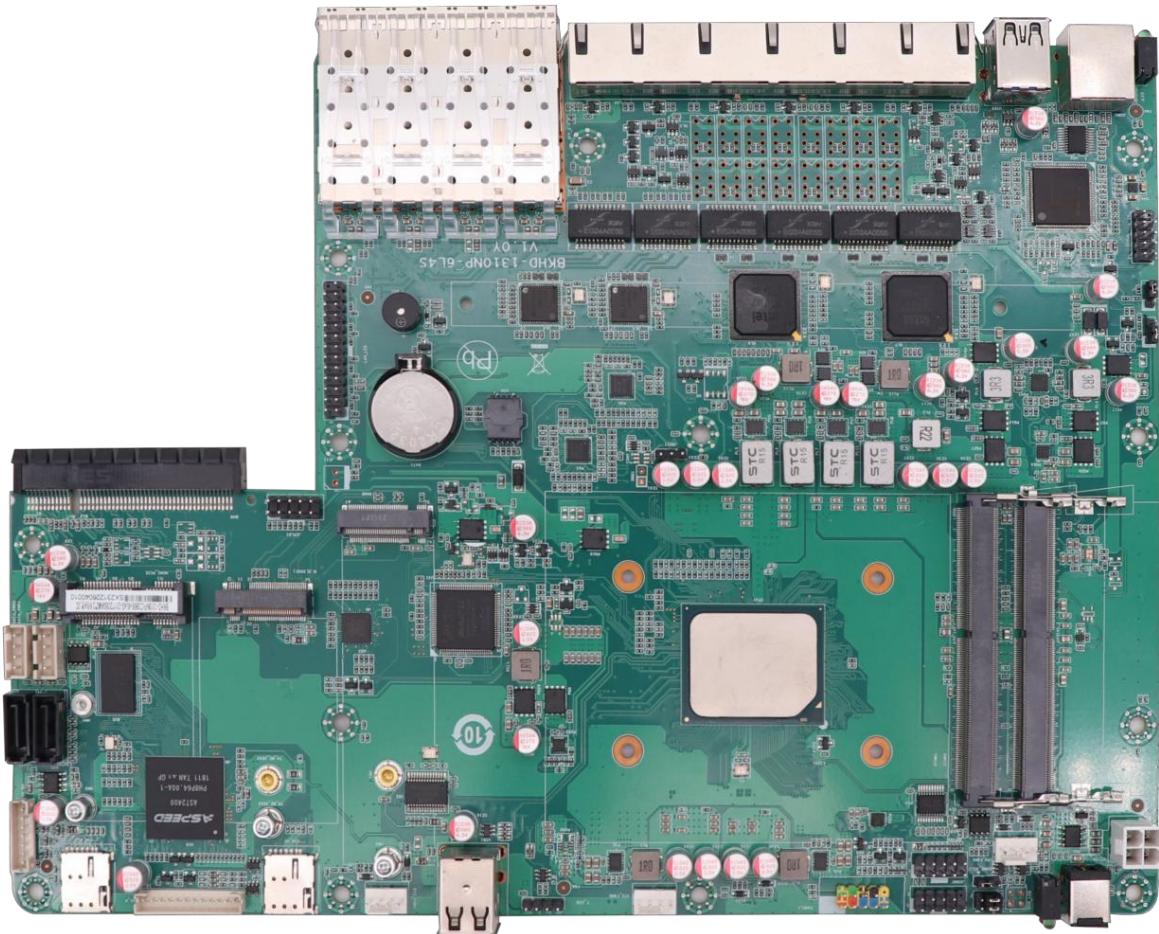

Product Profile

The 1310NP-6L4S is a motherboard designed for high-bandwidth networking, security, and edge computing applications. Powered by an Intel® Atom C-series processor, it features a hybrid network configuration with six Gigabit Ethernet ports and four 10G SFP+ optical ports. Supporting up to 64GB of DDR4 memory and equipped with a comprehensive range of expansion and storage interfaces, it provides a robust hardware foundation for next-generation network security appliances, virtualized servers, and data center edge gateways.

Main features:

High-Performance, Low-Power Processing Core

Powered by an embedded Intel® Atom C-series low-power processor, it delivers robust computing performance while significantly reducing overall system power consumption and heat generation—making it ideal for energy-sensitive applications.

Flexible Hybrid Network Architecture

Six Gigabit RJ45 ports driven by an Intel® controller support multi-segment access, while four integrated 10G SFP+ optical ports provide ultra-high bandwidth for high-speed uplinks or data center interconnects, striking a balance between cost and performance.

Optional Bypass Function

Key network ports support hardware bypass, which automatically establishes a physical bypass in the event of a power outage or device failure—ensuring uninterrupted network connectivity and greatly enhancing deployment reliability.

Extensive Expansion and Connectivity

A PCIe x8 slot (operating at x4 speed) allows the addition of network adapters, encryption cards, or specialized function cards to expand platform capabilities.

Diverse Storage Options

Supports up to 2x SATA ports and 1x M.2 NVMe SSD, offering a flexible balance of storage capacity and speed to meet varying system and data requirements.

Comprehensive Industrial Interfaces

Onboard pin headers, including COM ports, GPIO, and PS/2, provide versatile peripheral connectivity and adaptability for industrial environments.

High-Reliability Design

Supports 12V DC input for compatibility with diverse power supply environments. Two reserved system fan headers help maintain stable operation even in high-temperature conditions.

Motherboard Specifications

Processor	Product Collection	Intel Atom Processor C Series
	Sockets Supported	FCBGA1310
Memory specifications	Memory Type	DDR4 SODIMM
	Maximum Capacity	64GB
	Maximum Frequency	2400 MT/s
Storage specifications	SATA	2*SATA 6Gb/s
	M.2	1*M.2 Key-M 2280 SSD (PCIe Gen3 x2 rate)
Network features	Ethernet	6*1GbE, 4*10Gb SFP+
	Controller	4*Intel I350 (Optional ByPass), 2*Intel I211, 4*Intel X553
Extension interface	PCIe	1*PCIe x8 (PCIe Gen3 x4 rate)
	M.2 Key-B	1*M.2 Key-B 3052 (USB3.0 Signal)
	mPCIe	1*mPCIe (PCIe/USB Signal)
Display functions	Pins	1*VGA_H
	Chip	Based on onboard ASPEED AST2400 chip
Backplane I/O	Ethernet	6*RJ45, 4*SFP+
	USB	1*USB-A 3.0, 3*USB-A 2.0
	Console	1*RJ45 COM RS232
Onboard I/O	Power socket	1*ATX 4-pin Connector or 1*Jack DC 5.5/2.5mm
	SATA	2*SATA Data connector, 2*SATA Power socket
	Pins	1*F_PANEL 1*JCOM 1*F_USB 2.0

		1*JPS/2
		1*JCPLD, 1*JGPIO
		1*LED_LAN
		1*VGA_H
	Fan	1*CPU_FAN, 2*SYS_FAN
Power supply mode	DC	12V
Motherboard size	Specification	280*209 (mm)
Work Environment	Temperature	0°C~50°C;
	Humidity	5%~90% (Relative humidity, no condensation)


Motherboard Installation

Safety Note

- Please do not remove the serial number and agent warranty sticker from the motherboard prior to installation. Doing so may affect the product's warranty recognition standard.
- Prior to installing or removing the motherboard or other hardware devices, please ensure that the power is turned off and the power cord is unplugged from the socket.
- When installing additional hardware devices on the motherboard interfaces, please ensure that the connectors and sockets are securely fastened.
- When handling the motherboard, please avoid contact with the metal wiring components to prevent the risk of short circuits.
- It is recommended that an anti-static wrist strap be worn when handling the motherboard, central processing unit (CPU), or memory. In the absence of an anti-static wrist strap, it is advisable to ensure that your hands are dry and to touch a metal object first in order to eliminate static electricity.
- Before installing the motherboard, we kindly request that place it on an antistatic mat or in an antistatic bag.
- Make sure the power adapter is turned off before unplugging the motherboard power connector.
- Before turning on the power, make sure the voltage of the adapter is within the standard voltage range.
- Before turning on the power, make sure all hardware device cables and power cords are properly connected.
- Do not allow the fixing screws to collide with the circuits or parts on the motherboard to avoid damage or malfunction of the motherboard.
- Make sure there are no loose screws or metal parts on the motherboard or inside the computer case before using the unit.
- Please secure the computer host in a stable location before starting the device.
- To prevent system failure, do not place the unit in an environment where the temperature is excessive.
- Turning on the power before installation is complete may damage the motherboard, other equipment, or yourself.
- If you are unfamiliar with how to perform the installation, or if you have any technical problems using this product, please contact a professional technician.

Memory Installation

The motherboard provides DDR4 SODIMM memory slot.

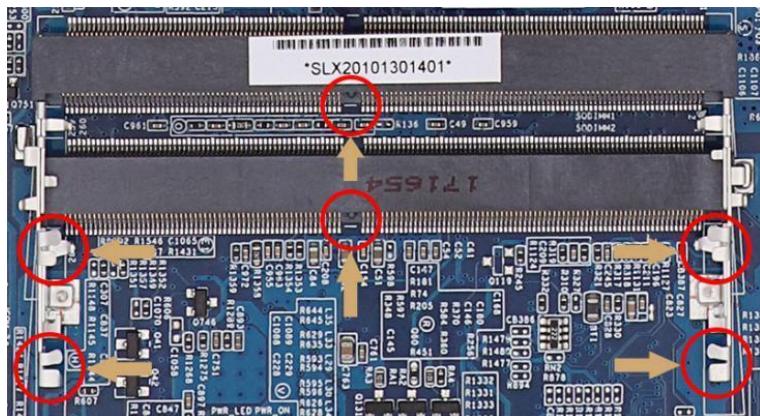

Before installing memory:

1. Please confirm that the memory you purchased is compatible with the specifications supported by this motherboard.
2. Before installing or removing the memory, please make sure that the power of the computer is turned off to avoid damage.
3. The memory design has a foolproof mark. If you insert the memory in the wrong direction, the memory cannot be installed. Please change the direction.

When installing memory:

1. Before installing or removing memory, please turn off the power and unplug the power cord.
2. Carefully hold the two ends of the Memory Stick and do not touch the metal contacts on the Memory Stick.
3. Align the metal contacts of the memory with the memory slot, making sure that the concave hole is aligned with the convex point of the upper slot.
4. Insert the memory into the slot at an angle of 30 degrees, then press the Memory Stick down until you hear a "click," indicating that the memory has been successfully installed and is ready to use. (Note: Do not press the Memory Stick too hard to avoid damaging the memory).
5. To remove the Memory Stick, push out the tabs at both ends of the memory slot simultaneously, and then remove the Memory Stick.

To remove the memory:

Use two fingers to push the latches at either end of the slot outward, the memory will pop up, then remove the memory.

Jumper Setting


Before installing the hardware device, you can set the corresponding jumpers according to your needs based on the following table.

To identify the first pin of a jumper or connector

Look at the marking next to the jumper or connector. The triangle symbol "▲" or "1" or a bold line indicates the first pin; check the pad on the back of the motherboard. The square pad is the first pin. When connecting the connector to the device, be careful to distinguish the first pin. Mixing the pins will damage the motherboard.

2-pin headers: Insert a jumper cap into both pins turns them off (short).

3-pin headers: Insert a jumper cap into pins 1-2 or pins 2-3 to off (short) them.

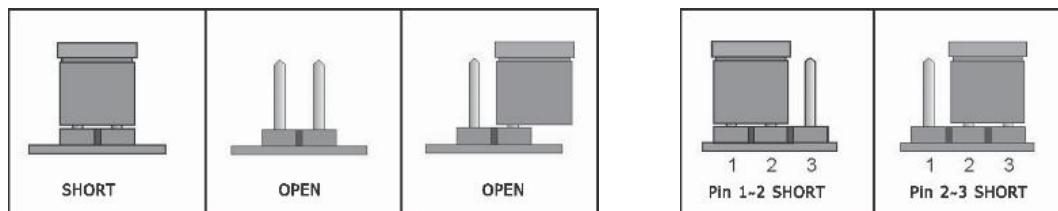

CLR_CMOS Jumper Setting

Image	Status	Setting
	1-2	Normal (Default)
	2-3	CMOS Data Clearance

Note: Do not clear CMOS when the computer is powered on to avoid damaging the motherboard!

JAT_ATX Jumper Setting

Image	Status	Setting
	1-2	Enable Automatic Power On (Default)
	2-3	Normal

Motherboard Pin Definition


SATA Data

The motherboard provides 7-pin SATA data socket:

Image	PIN	Definition	PIN	Definition
	1	GND	2	SATA_TXP
	3	SATA_TXN	4	GND
	5	SATA_RX-	6	SATA_RXP
	7	GND		-

SATA PWR

The motherboard provides SATA power socket (1*4-pin, 2.00 mm pitch):

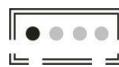Image	PIN	Definition
	1	+12V
	2	GND
	3	GND
	4	+5V

Front panel pin: F_PANEL

The motherboard provides F_PANEL pins (2*5-pin, 2.54 mm pitch, 10th pin is empty):

Image	PIN	Definition	PIN	Definition
	1	HDD_LED+	2	PWR_LED+
	3	HDD_LED-	4	PWR_LED-
	5	GND	6	PWR_ON
	7	RESET	8	GND
	9	GND		


Serial Port (COM)

The motherboard provides RJ45 COM port:

Image	PIN	Definition	PIN	Definition
	1	RTS#	2	DTR#
	3	TXD	4	N/A
	5	GND	6	RXD
	7	DSR#	8	CTS#

The motherboard provides COM pins (2*5-pin, 2.54mm pitch, 10th pin is empty):

RS232	PIN	Definition	PIN	Definition
	1	DCD#	2	RXD
	3	TXD	4	DTR#
	5	GND	6	DSR#
	7	RTS#	8	CTS#
	9	RI#		

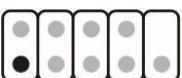RS485	PIN	Definition	PIN	Definition
	1	DATA-	2	DATA+
	3	N/C	4	N/C
	5	GND	6	N/C
	7	N/C	8	N/C
	9	N/C		

COM2_SEL 1/2 Jumpers are used to set the transmission mode of COM2. Both RS232 and RS485 transmission modes are supported. You can choose the setting according to your needs. The default transmission mode is RS232.

COM2_SEL 1 (2*3-pin, 2.00mm pitch)

Image	PIN	Definition
	3-5 4-6	RS-232 (Default)
	1-3 2-4	RS-485

COM2_SEL 2 (2*3-pin, 2.00mm pitch)

Image	PIN	Definition
	1-2	RS-232 (Default)
	2-3	RS-485

USB Expansion pin: F_USB


Before connecting the USB expansion board, be sure to turn off the computer and unplug the power cord from the socket to avoid damaging the USB expansion board.

The motherboard provides F_USB pins (1*4-pin, 2.54 mm pitch):

Image	PIN	Definition
	1	+5V
	2	USB DATA+
	3	USB DATA-
	4	GND

Cooling fan power socket: SYS_FAN, CPU_FAN

The motherboard provides SYS_FAN and CPU_FAN pins (1*4-pin, 2.54 mm pitch):

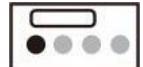Image	PIN	Definition
	1	Ground
	2	+12V
	3	FAN_TACH
	4	FAN_PWM

VGA Expansion pin: J_VGA

The motherboard provides VGA pins (1*12-pin, 2.00 mm pitch):

Image	PIN	Definition	PIN	Definition
	1	GND	2	VSYNC
	3	HSync	4	GND
	5	Red	6	GND
	7	Green	8	GND
	9	Blue	10	GND
	11	DCC_Data	12	DCC_CLK


PS/2 Keyboard and Mouse

The motherboard provides PS/2 pin (1*7-pin, 2.00 mm pitch):

Image	PIN	Definition
	1	KB_DATA
	2	KB_CLK
	3	GND
	4	MS_DATA
	5	MS_CLK
	6	GND
	7	+5V

J_GPIO 1

The motherboard provides GPIO pins (2*5-pin, 2.54 mm pitch):

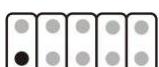Image	PIN	Definition	PIN	Definition
	1	GND	2	PWR
	3	GPIO 0	4	GPIO 1
	5	GPIO 2	6	GPIO 3
	7	GPIO 4	8	GPIO 5
	9	GPIO 6	10	GPIO 7

J_CPLD 1

The motherboard provides CPLD pins (2*5-pin, 2.54 mm pitch):

Image	PIN	Definition	PIN	Definition
	1	CPLD_JTAG_TCK	2	GND
	3	CPLD_JTAG_TDO	4	VCC
	5	CPLD_JTAG_TMS	6	N/A
	7	N/A	8	N/A
	9	CPLD_JTAG_TDI	10	GND

Network indicator: LAN_LED

The motherboard provides LAN_LED pins (2*13-pin, 2.54 mm pitch, 26th pin is empty):

Image	PIN	Definition	PIN	Definition	
	1	LAN 1_LINK_ACT-	2	LAN 1_LINK_ACT+	
	3	LAN 1_LINK_100-	4	LAN 1_LINK_1000-	
	5	LAN 2_LINK_ACT-	6	LAN 2_LINK_ACT+	
	7	LAN 2_LINK_100-	8	LAN 2_LINK_1000-	
	9	LAN 3_LINK_ACT-	10	LAN 3_LINK_ACT+	
	11	LAN 3_LINK_100-	12	LAN 3_LINK_1000-	
	13	LAN 4_LINK_ACT-	14	LAN 4_LINK_ACT+	
	15	LAN 4_LINK_100-	16	LAN 4_LINK_1000-	
	17	LAN 5_LINK_ACT-	18	LAN 5_LINK_ACT+	
	19	LAN 5_LINK_100-	20	LAN 5_LINK_1000-	
	21	LAN 6_LINK_ACT-	22	LAN 6_LINK_ACT+	
	23	LAN 6_LINK_100-	24	LAN 6_LINK_1000-	
	25	N/A			

ATX Power Connector (DC power supply)

Before plugging the power supply into the power outlet, make sure the power supply is turned off and all devices are properly installed. The power outlet has a foolproof design; ensure the correct orientation before plugging it in.

(Do not use it and the panel's DC IN connector to power the motherboard at the same time.)

Image	PIN	Definition
	1	Ground
	2	Ground
	3	+12V
	4	+12V

BIOS User Guide

BIOS Description

This motherboard uses AMI BIOS. BIOS stands for (Basic Input Output System). It is a set of programs stored on a ROM (Read Only Memory) chip on the computer's motherboard. It stores the computer's most important basic I/O programs, the power-on self-test program, and the system startup program. It can read and write specific information about system settings from the CMOS. Its primary function is to provide the most basic and immediate hardware settings and control for the computer.

When you turn on your computer, the BIOS is the first program to run. It has the following main functions:

- The Power-On Self-Test (POST) checks whether the computer is functioning properly.
- It initializes and tests some external devices and loads your operating system.
- It provides the lowest-level, most basic control of your computer hardware.
- You manage your computer through the SETUP function in the BIOS.

The BIOS data is stored in a CMOS/R RAM chip on the motherboard, maintained by a 3.3V button battery. It contains important system information and the BIOS Setup program for setting system parameters. When the system is operating normally, the BIOS does not need to be modified. However, if the CMOS data is lost due to other reasons, the BIOS must be reset.

Note:

Incorrect BIOS settings can directly damage the computer hardware and even burn out the motherboard. Those unfamiliar with the system are advised to modify the settings with caution. Because the motherboard BIOS is constantly being updated, the BIOS information in this manual is for reference only. We cannot guarantee that the BIOS information in this manual will be consistent with the actual BIOS information on the motherboard.

BIOS Settings

When the motherboard is powered on or the system is restarted, the following prompt will appear on the display screen in the Post interface. Press "DEL" on the keyboard to enter BIOS Setup.



If this message disappears before you respond, you can press <Ctrl> + <Alt> + at the same time to restart the computer, or shut down and then restart the computer, or press the power button on the case to restart the computer.

Keyboard keys	Functional Description
← / →	Move the Left and Right arrows to select the screen.
↑ / ↓	Move the Up and Down arrows to select the item.
+ / -	Increase/Decrease value or Change selection
<Enter>	Select, Confirm this option or Enter the submenu
<ESC>	Return to Main page, or End the setup process from Main page
<F1>	Show related Help instructions
<F2>	Restore previous settings
<F9>	Load the optimized settings (BIOS defaults)
<F10>	Save the changed settings and reboot

Common fault analysis and solutions

We have compiled some frequently asked questions for your reference. Please check
<https://bkminipc.com/frequently-asked-questions-and-answers/>

Error	Inspection Method
Unable to start after power on	<p>Make sure the power cord is properly connected.</p> <p>Make sure that the power supply you are using meets the power supply requirements of the motherboard.</p> <p>Try to reinsert the Memory Stick.</p> <p>Try to replace the Memory Stick.</p> <p>Try to clear the CMOS of the main board.</p> <p>Please confirm if there is an external expansion card and if it is normal after removing the external card.</p>
Unable to display after power on	<p>Make sure the monitor is turned on.</p> <p>Make sure the monitor and host power cables are properly connected.</p> <p>Make sure the monitor and host cables are properly connected.</p> <p>Check to see if the monitor is in "Sleep" mode.</p> <p>Try changing the monitor interface or replacing the monitor.</p>
BIOS Setup cannot be saved	<p>Check that the CMOS battery is installed</p> <p>Try to replace the CMOS battery (CR2032)</p> <p>Adjust the time and date in BIOS setup</p>
Unable to find a bootable device	<p>Make sure the drive's power and data cables are properly connected.</p> <p>Make sure the operating system is installed on the drive.</p> <p>Make sure the hard drive is not physically damaged.</p>
Blue screen or freeze when logging on to the system	<p>Check if the Memory Stick and External Card are loose.</p> <p>Try removing the newly installed hardware and uninstalling the newly installed driver or software.</p> <p>Try replacing the memory with a different specification.</p>
Slow entry into the operating system	<p>Check if the CPU cooling fan is running normally.</p> <p>Check if the remaining space of the system partition is insufficient.</p> <p>Use software to check for bad sectors on the hard drive.</p>
System restarts automatically	<p>Confirm that the CPU cooling fan is rotating normally.</p> <p>Confirm that the switch/reset button has not been accidentally touched.</p> <p>Confirm that the Memory Stick and external card are loose.</p> <p>Confirm that the power supply has sufficient load capacity, try to replace the power supply</p> <p>Check if the system is infected with viruses.</p>
Unable to detect USB device	<p>Confirm that the USB device requires separate power.</p> <p>Confirm that the USB interface has poor contact.</p> <p>Confirm that the USB controller is enabled in the BIOS setup.</p>

Useful Links

Submit your suggestions and ideas in the community	https://www.reddit.com/r/bkminipc/	
Watch our new product demos	https://www.youtube.com/@BKHD-PCs	
Corporate News and Cooperation	https://www.linkedin.com/company/beikong/	
Get our latest news on Meta	https://www.facebook.com/people/%E5%80%8D%E6%8E%A7/61558406109357/	