



BKHD-2049NP-6L-15 Motherboard

VER 1.0

Copyright Notice:

©2025 Beikong Industrial Control. All rights reserved.

All trademarks, service marks, company names, and logos referenced in this manual are the property of their respective owners. Any use of these trademarks, service marks, company names, and logos without express written permission from Beikong Industrial Control or the respective trademark owners is strictly prohibited.

Responsibility Statement:

This user manual and its contents, including text, images, charts, and other materials, are protected by copyright law and are the property of Beikong Industrial Control. Please be advised that without the written permission of Beikong Industrial Control, the manual may not be copied, distributed, displayed, modified, created as a derivative work, transmitted, or publicly performed or displayed in any way or form.

Beikong Industrial Control reserves the right to modify the product specifications, features, designs, or any related information mentioned in this user manual at any time without prior notice. Please be advised that any such modifications will take effect without further notice.

Any reproduction, modification, reprinting, transmission, or publication of the contents of this manual in any form without prior written permission from Beikong Industrial Control is strictly prohibited. Any violation of this statement may result in legal action and damages.

Safety Guide

To ensure optimal use of Beikong products, please review the user manual in its entirety. Before reviewing product-specific information, we kindly request that you carefully read the safety instructions.

Product Version Identification


The product version number can be found on the motherboard, where X.X represents a number. For example, if the version is indicated as [VER1.0], it signifies that the current version of the motherboard is 1.0. The BIOS interface homepage provides information such as [XXXXNP-XXXX], which denotes the BIOS version number utilized by the current product. When updating the motherboard's BIOS, driver, or referencing other technical documents, please refer to the product version label for the most up-to-date information.

Catalog


Copyright Notice:	1
Responsibility Statement:	1
Safety Guide	1
Product Version Identification	1
Product Images	3
Block Diagram	4
Product Profile	5
Motherboard Specifications	6
Motherboard Installation	7
Memory Installation	8
Jumper Setting	9
AUTO_ON Jumper Setting	14
RST_GPIO_SEL1 Jumper Setting	14
CLR_CMOS Jumper Setting	14
JUSB3PWR_SET1 Jumper Setting	15
Motherboard Pin Definition	16
PWR1	16
SATA interface	16
SATA PWR	16
F_PANEL	17
TPM	17
System cooling fan power socket: SYS_FAN 1/2	18
Processor cooling fan power socket: CPU_FAN	18
Serial Port (COM)	18
BIOS User Guide	19
BIOS Description	19
BIOS Settings	20
BIOS Information	21
Advanced Settings	21
ACPI Settings	22
CPU Configuration	23
Power & Performance	24
System Agent (SA) Configuration	26
PCIe Configuration	27
PCH-IO Configuration	28
PCH-FW Configuration	30
Trusted Computing	31
IT8613 Super IO Configuration	32
Hardware Monitor	33
Serial Port Console Redirection	34
USB Configuration	35
Network Configuration	36
Nvme Configuration	37
Security	38
Boot Settings	39
Save&Exit Settings	40
Common fault analysis and solutions	41
Useful Links	42

Product Images

Please be advised that products manufactured in different batches may exhibit slight variations in appearance. To ensure the most accurate representation, please refer to the actual received goods.

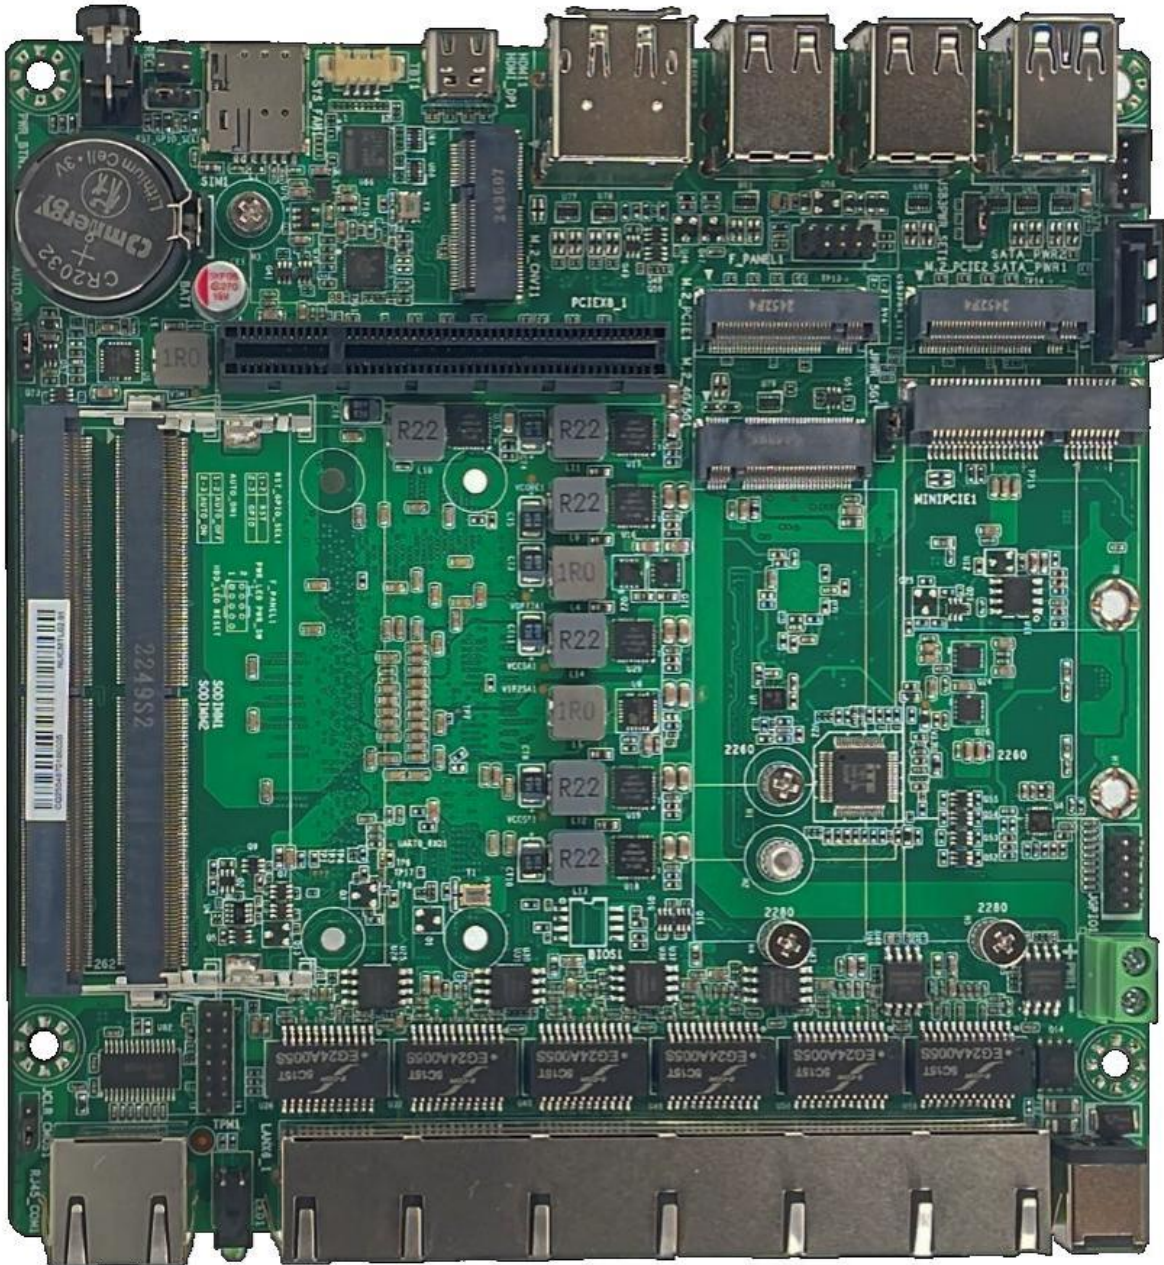

Block Diagram

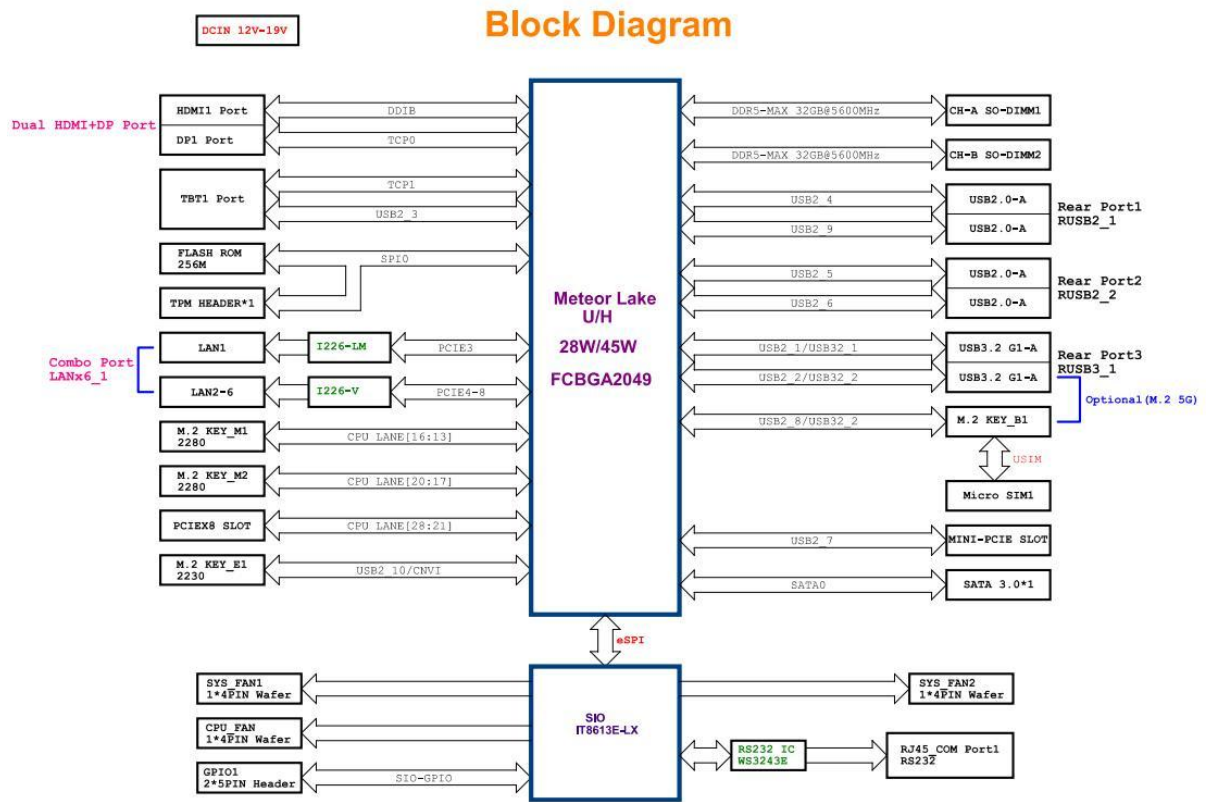

Product Profile

The 2049NP-6L-15-MB sets a new benchmark for compact industrial motherboards, integrating extreme interface density, powerful Intel Ultra H-series processors with AI acceleration, and unprecedented expansion flexibility into a compact form factor. Designed for 24/7 operation and equipped with enterprise-grade remote management (vPro) and reliability features (watchdog timer, automatic power supply), it is the ideal hardware platform for building next-generation networking, security, edge computing, and industrial automation systems that demand extreme edge performance, connectivity, and resiliency.

Main features:

Unparalleled Port Connectivity: 6 x 2.5GbE ports: Industry-leading port density for high-bandwidth networking, servers, or security applications. Supports link aggregation and segmentation. Supports vPro processor (LAN1): Enables enterprise-class remote out-of-band management (KVM, power control, troubleshooting). Supports Wake-on-LAN (S4/S5) and PXE boot for network deployments. 1 x RJ45 COM port (RS232) for industrial equipment integration.

Flexible Processing: Supports Intel Ultra H-series CPUs: Optional Ultra 5 125H / Ultra 7 125H / Ultra 9 185H provide balanced performance for high-end computing needs. Integrated Intel Arc Graphics: Supports media acceleration and multiple display interfaces (DP + HDMI) for signage, kiosks, and human-machine interfaces (HMIs). Integrated Intel AI Boost NPU dedicated hardware enables efficient, low-latency AI inference at the edge.

Industrial-grade reliability and management: Powerful power handling capabilities, with 19V DC input via a DC Jack or Phoenix connector, suitable for industrial power supplies and PoE splitters. Support for ACPI-compliant power management ensures automatic system startup upon AC power restoration, ensuring system stability. A TPM header ensures hardware security.

Highly scalable storage and expansion: Fast storage with two PCIe 4.0 M.2 Key-M SSDs and one SATA 6Gb/s port. Ideal for operating systems, applications, and data/cache drives. Future-proof expansion with one PCIe 5.0 x8 slot (supporting high-bandwidth add-in cards such as GPUs, FPGA accelerators, or NICs). Also included are one mPCIe slot, M.2 Key-B (for USB signal expansion cards, such as LTE/Wi-Fi), and M.2 Key-E (for Intel CNVi Wi-Fi/Bluetooth). Onboard GPIO headers are available for sensor integration.

Motherboard Specifications

Processor	Product Collection	Intel Core Ultra processors (Series 1)
	Sockets Supported	FCBGA2049
Memory specifications	Memory Type	Dual Channel DDR5 SO-DIMM
	Maximum Capacity	96GB
	Maximum Frequency	5600 MT/s
Storage specifications	SATA	1*SATA 6Gb/s
	M.2	2*M.2 Key-M 2280 (PCIe Gen4 x4)
Network features	Ethernet	6*2.5GbE
	Controller	1*Intel I226LM/5*Intel I226V
Extension interface	mPCIe	1*mPCIe (USB2.0 Signal)
	M.2	1*M.2 Key-B 3052 (USB2.0/3.0 Signal)
		1*M.2 Key-E 2230 (CNVi Signal)
Display functions	Port	1*DP/1*HD
	Chip	Integrated Intel Arc graphics
NPU functions	Intel AI Boost	OpenVINO, WindowsML, DirectML, ONNX RT
I/O Chip	IT8613	Handling CPU/SYS Fan data/GPIO/COM ports
	USB	4*USB-A 2.0/2*USB-A 3.2
Backplane I/O	Type-C	1*Thunderbolt (40Gbit/s)
	Display	1*DP/1*HD
	COM	1*RJ45 COM-RS232
	LAN	6*RJ45
	Power Supply	1*Jack DC 5.5/2.5mm
	SIM	2*Micro SIM card slots
	Fan	1*SYS_FAN
Onboard I/O	SATA	1*SATA Data connector/1*SATA Power socket
		1*F_PANEL
	Pins	1*GPIO
		1*TPM
	Fan	1*CPU_FAN/1*SYS_FAN
Power supply mode	DC	Jack DC or Phoenix Terminal (19V)
Motherboard size	Specification	150*145 (mm)
Work Environment	Temperature	0°C~60°C;
	Humidity	0%~95% (Relative humidity, no condensation)


Motherboard Installation

Safety Note

- Please do not remove the serial number and agent warranty sticker from the motherboard prior to installation. Doing so may affect the product's warranty recognition standard.
- Prior to installing or removing the motherboard or other hardware devices, please ensure that the power is turned off and the power cord is unplugged from the socket.
- When installing additional hardware devices on the motherboard interfaces, please ensure that the connectors and sockets are securely fastened.
- When handling the motherboard, please avoid contact with the metal wiring components to prevent the risk of short circuits.
- It is recommended that an anti-static wrist strap be worn when handling the motherboard, central processing unit (CPU), or memory. In the absence of an anti-static wrist strap, it is advisable to ensure that your hands are dry and to touch a metal object first in order to eliminate static electricity.
- Before installing the motherboard, we kindly request that place it on an antistatic mat or in an antistatic bag.
- Make sure the power adapter is turned off before unplugging the motherboard power connector.
- Before turning on the power, make sure the voltage of the adapter is within the standard voltage range.
- Before turning on the power, make sure all hardware device cables and power cords are properly connected.
- Do not allow the fixing screws to collide with the circuits or parts on the motherboard to avoid damage or malfunction of the motherboard.
- Make sure there are no loose screws or metal parts on the motherboard or inside the computer case before using the unit.
- Please secure the computer host in a stable location before starting the device.
- To prevent system failure, do not place the unit in an environment where the temperature is excessive.
- Turning on the power before installation is complete may damage the motherboard, other equipment, or yourself.
- If you are unfamiliar with how to perform the installation, or if you have any technical problems using this product, please contact a professional technician.

Memory Installation

The motherboard provides DDR5 SODIMM memory slot.

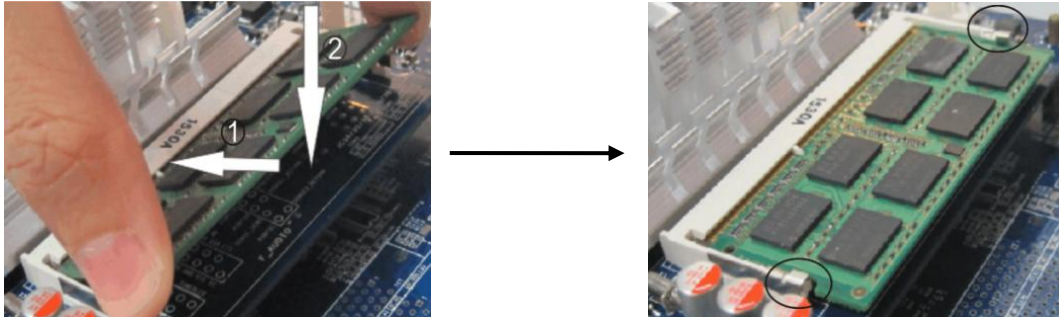

Before installing memory:

1. Please confirm that the memory you purchased is compatible with the specifications supported by this motherboard.
2. Before installing or removing the memory, please make sure that the power of the computer is turned off to avoid damage.
3. The memory design has a foolproof mark. If you insert the memory in the wrong direction, the memory cannot be installed. Please change the direction.

When installing memory:

1. Before installing or removing memory, please turn off the power and unplug the power cord.
2. Carefully hold the two ends of the Memory Stick and do not touch the metal contacts on the Memory Stick.
3. Align the metal contacts of the memory with the memory slot, making sure that the concave hole is aligned with the convex point of the upper slot.
4. Insert the memory into the slot at an angle of 30 degrees, then press the Memory Stick down until you hear a "click," indicating that the memory has been successfully installed and is ready to use. (Note: Do not press the Memory Stick too hard to avoid damaging the memory).
5. To remove the Memory Stick, push out the tabs at both ends of the memory slot simultaneously, and then remove the Memory Stick.

To remove the memory:


Use two fingers to push the latches at either end of the slot outward, the memory will pop up, then remove the memory.

Jumper Setting


Before installing the hardware device, you can set the corresponding jumpers according to your needs based on the following table.

To identify the first pin of a jumper or connector

Look at the marking next to the jumper or connector. The triangle symbol "▲" or "1" or a bold line indicates the first pin; check the pad on the back of the motherboard. The square pad is the first pin. When connecting the connector to the device, be careful to distinguish the first pin. Mixing the pins will damage the motherboard.

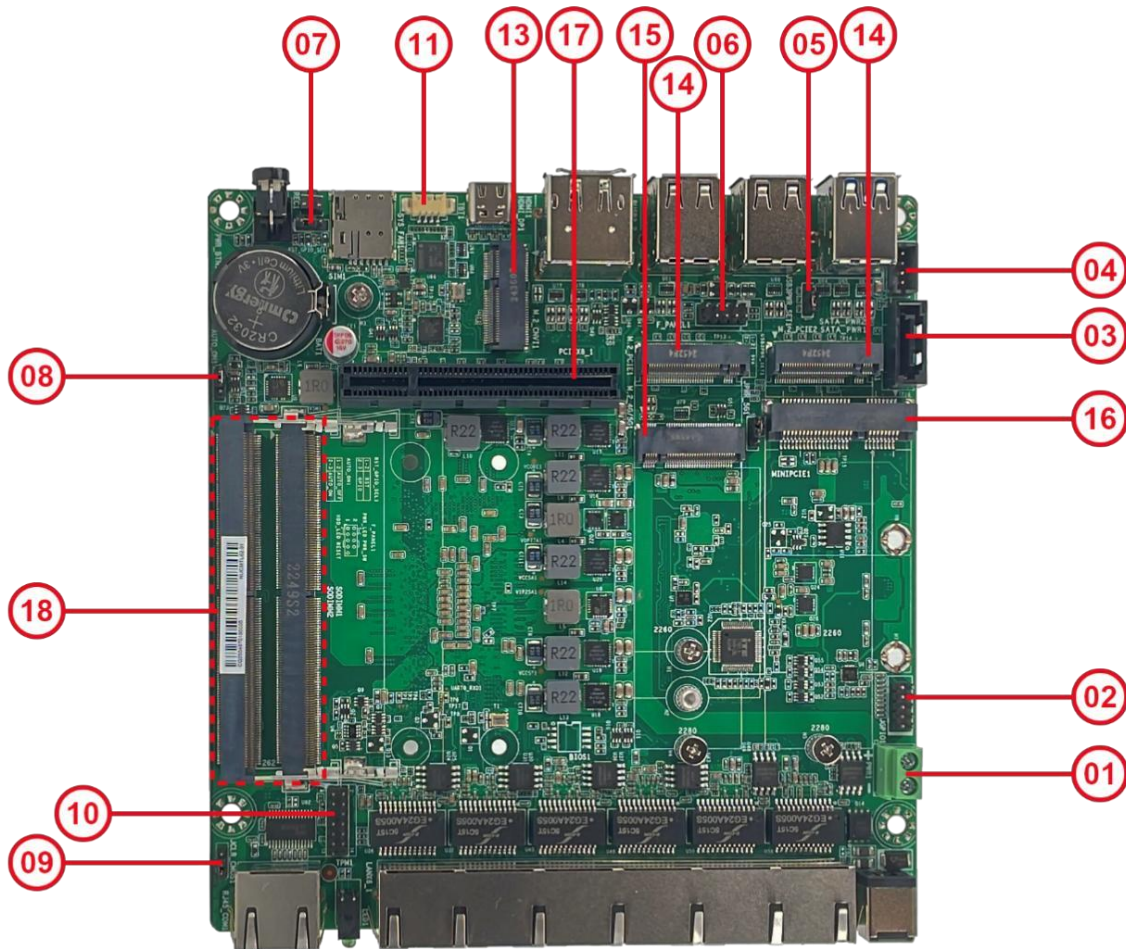

The pictures are for reference only, please refer to the actual product.

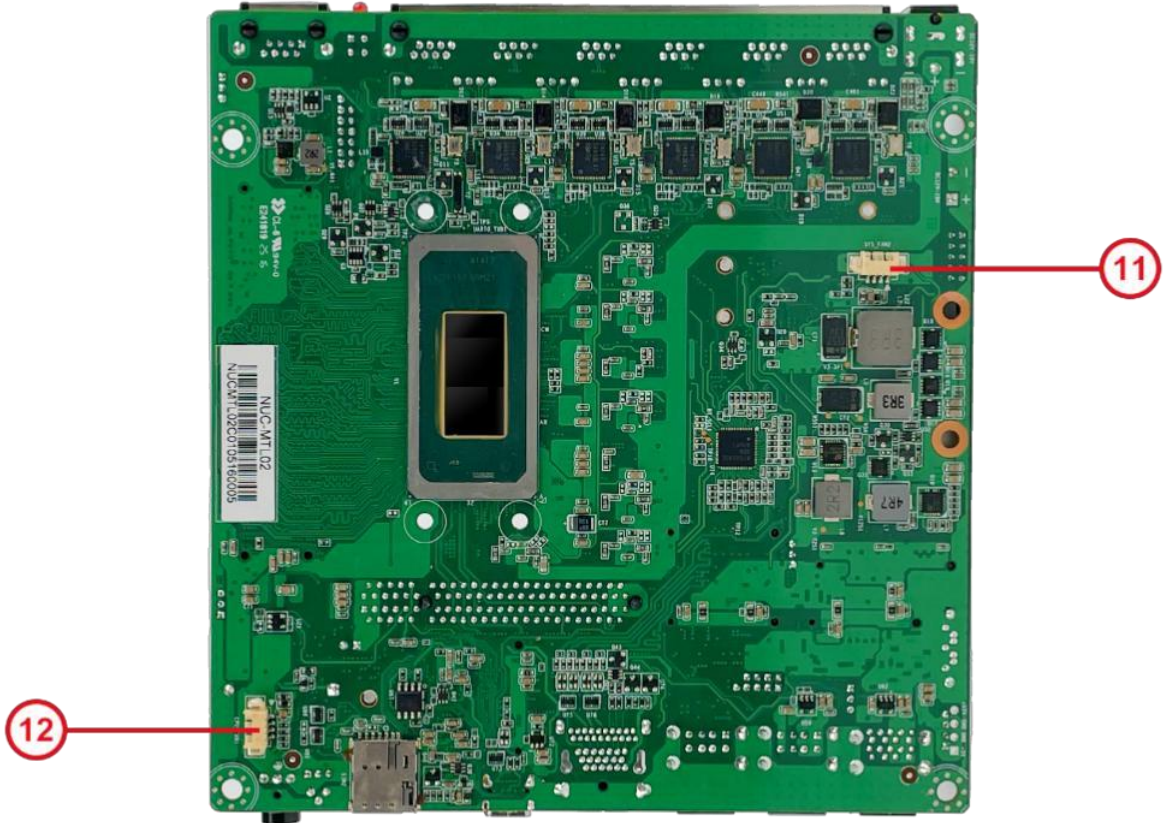

Number	Item	Describe
1	PWR1	Phoenix Terminal for DC19V Power Supply
2	JGPIO	Onboard GPIO (General-Purpose Input/Output) pins
3	SATA	SATA HDD/SSD Data Connectors
4	SATA_PWR	SATA HDD/SSD Power Socket
5	JUSB3PWR_SET1	Setting the USB 3.0 Port powered jumper
6	F_PANEL	Motherboard function pin, used to connect chassis button
7	RST_GPIO_SEL1	Setting the Jumpers for the Panel Buttons
8	AUTO_ON	Jumper to enable or disable Auto Power-On

9	CLR_CMOS	CMOS jumper, used to clear BIOS settings
10	TPM	TPM pin, used for external TPM module
11	SYS_FAN 1/2	System fan, used to install chassis fan
12	CPU_FAN1	For CPU fan power supply
13	M.2_CNVi	M.2 Key-E slot, Used to install WiFi/BT modules for CNVI protocol
14	M.2_PCl_e	M.2 Key-M Storage SSD interface
15	M.2_4G/5G	M.2 Key-B slot, Used to install modules for USB protocol
16	Mini PCIe	Mini PCIe slot, Used to install modules for USB protocol
17	PCIe x8	Used to install expansion cards for PCIe x8/x4/x2/x1 slot
18	SODIMM 1/2	DDR5 SO-DIMM memory slot (RAM)



Item	Describe
RJ45 COM	RJ45 port for COM RS232 standard
PWR/HDD LED	LED Indicator (Power: Green; Hard disk: Red)


	RJ45 Ethernet port for LAN/WAN
RJ45 Connectors	Link LED: Green and solid, indicating the network is connected Active LED: Orange flashing, indicating data transmission
DC_IN	Jack DC 5.5/2.5mm Power connector, 19V



Item	Describe
USB 3.0	Double-layer USB-Type-A 3.2 port (10Gbps)
USB 2.0	Double-layer USB-Type-A 2.0 port
DP_HDMI	DP and HDMI display ports
USB Type-C	Thunderbolt 40Gbps
SYS_FAN	4-pin System Fan
SIM 1/2	Micro SIM card slot
REC_BTN	Reset Button, can be switched to GPIO via jumper.
PWR_BTN	Power Button to turn the device ON or OFF

2-pin headers: Insert a jumper cap into both pins turns them off (short).

3-pin headers: Insert a jumper cap into pins 1-2 or pins 2-3 to off (short) them.

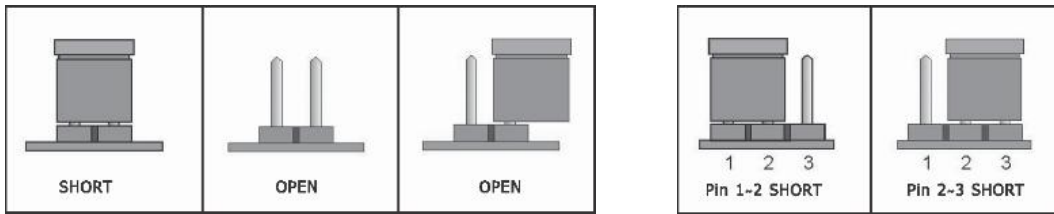

AUTO_ON Jumper Setting

Image	Status	Setting
	1-2	Normal (Default)
	2-3	Enable Automatic Power On


RST_GPIO_SEL1 Jumper Setting

Image	Status	Setting
	1-2	RST
	2-3	GPIO

CLR_CMOS Jumper Setting

Image	Status	Setting
	1-2	Normal (Default)
	2-3	Data Clearance

JUSB3PWR_SET1 Jumper Setting


Image	Status	Setting
	1-2	+5V Standard (Default)
	2-3	+5V Analog

Motherboard Pin Definition

PWR1


The motherboard provide Phoenix connector, Supporting 12V-19V input and output:

(Do not use it and the panel's DC IN connector to power the motherboard at the same time.)

Image	PIN	Definition	PIN	Definition
	+	12V_19V	-	GND


SATA interface

The motherboard provides 7-pin SATA data socket:

Image	PIN	Definition	PIN	Definition
	1	GND	2	SATA_TX+
	3	SATA_TX-	4	GND
	5	SATA_RX-	6	SATA_RX+
	7	GND	-	-

SATA PWR

The motherboard provides 4-pin SATA power socket:

Image	PIN	Definition
	1	5V
	2	GND
	3	GND
	4	12V


F_PANEL

The motherboard provides F_PANEL pins (pin header spacing: 2.00mm):

Image	PIN	Definition	PIN	Definition
	1	HDD_LED+	2	PWR_LED+
	3	HDD_LED-	4	PWR_LED-
	5	GND	6	PWR_BTN
	7	Reset_BTN	8	GND
	9	GND		


TPM

The motherboard provides TPM pin (pin header spacing: 2.00mm):

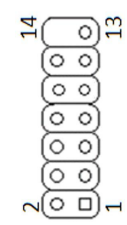Image	PIN	Definition	PIN	Definition
	1	VCC	2	S_SPI_TPM_IRQ#
	3	S_PLTRST#	4	S_SPI_TPM_CS2#
	5	F2_SPI_CS1#_R	6	F_BOIS_WP#_R
	7	+3V_SPI	8	GND
	9	F_SPI_CSO#_R	10	T_SPI_CLK
	11	T_SPI_MISO	12	T_SPI_MOSI
	13	F_SPI_HOLD#_R	14	NC


System cooling fan power socket: SYS_FAN 1/2

The motherboard provides 4-pin system cooling fan connectors (pin header spacing: 1.25mm):

Image	PIN	Definition
	1	Ground
	2	+12V
	3	Sense
	4	Control


Processor cooling fan power socket: CPU_FAN

The motherboard provides 4-pin processor cooling fan connector (pin header spacing: 1.25mm):

Image	PIN	Definition
	1	Ground
	2	+12V
	3	Sense
	4	Control

Serial Port (COM)

The motherboard provides RJ45 COM port:

Image	PIN	Definition	PIN	Definition
	1	RTS#	2	DTR#
	3	TXD	4	N/A
	5	GND	6	RXD
	7	DSR#	8	CTS#

BIOS User Guide

BIOS Description

This motherboard uses AMI BIOS. BIOS stands for (Basic Input Output System). It is a set of programs stored on a ROM (Read Only Memory) chip on the computer's motherboard. It stores the computer's most important basic I/O programs, the power-on self-test program, and the system startup program. It can read and write specific information about system settings from the CMOS. Its primary function is to provide the most basic and immediate hardware settings and control for the computer.

When you turn on your computer, the BIOS is the first program to run. It has the following main functions:

- The Power-On Self-Test (POST) checks whether the computer is functioning properly.
- It initializes and tests some external devices and loads your operating system.
- It provides the lowest-level, most basic control of your computer hardware.
- You manage your computer through the SETUP function in the BIOS.

The BIOS data is stored in a CMOS/RAM chip on the motherboard, maintained by a 3.3V button battery. It contains important system information and the BIOS Setup program for setting system parameters. When the system is operating normally, the BIOS does not need to be modified. However, if the CMOS data is lost due to other reasons, the BIOS must be reset.

Note:

Incorrect BIOS settings can directly damage the computer hardware and even burn out the motherboard. Those unfamiliar with the system are advised to modify the settings with caution. Because the motherboard BIOS is constantly being updated, the BIOS information in this manual is for reference only. We cannot guarantee that the BIOS information in this manual will be consistent with the actual BIOS information on the motherboard.

BIOS Settings

When the motherboard is powered on or the system is restarted, the following prompt will appear on the display screen in the Post interface. Press "DEL" on the keyboard to enter BIOS Setup.




If this message disappears before you respond, you can press <Ctrl> + <Alt> + at the same time to restart the computer, or shut down and then restart the computer, or press the power button on the case to restart the computer.

Keyboard keys	Functional Description
← / →	Move the Left and Right arrows to select the screen.
↑ / ↓	Move the Up and Down arrows to select the item.
+ / -	Increase/Decrease value or Change selection
<Enter>	Select, Confirm this option or Enter the submenu
<ESC>	Return to Main page, or End the setup process from Main page
<F1>	Show related Help instructions
<F2>	Restore previous settings
<F9>	Load the optimized settings (BIOS defaults)
<F10>	Save the changed settings and reboot

BIOS Information


Advanced Settings

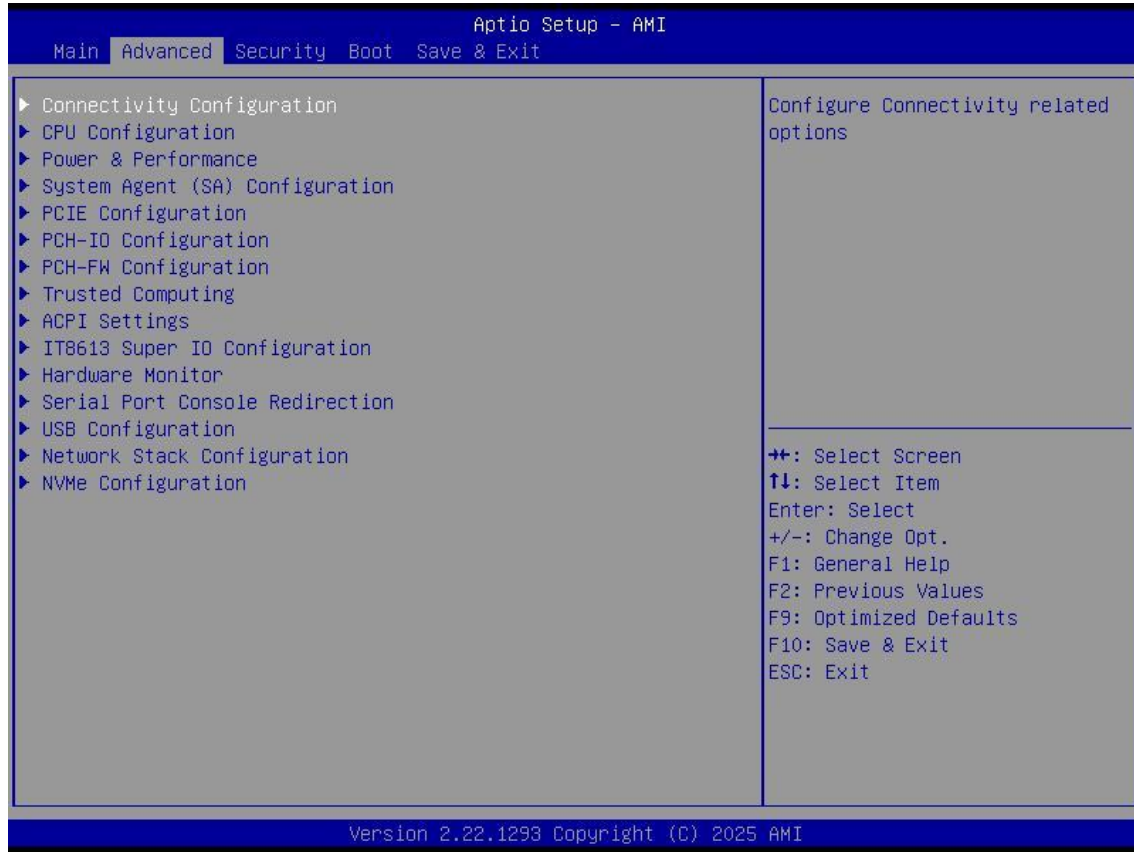



ACPI Settings

Advanced		Aptio Setup - AMI
ACPI Settings		Enables or Disables BIOS ACPI Auto Configuration.
Enable ACPI Auto Configuration	[Disabled]	
Enable Hibernation	[Enabled]	
ACPI Sleep State	[Suspend Disabled]	
Wake System from S5	[Disable]	
		++: Select Screen ↑↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F9: Optimized Defaults F10: Save & Exit ESC: Exit
Version 2.22.1293 Copyright (C) 2025 AMI		

CPU Configuration

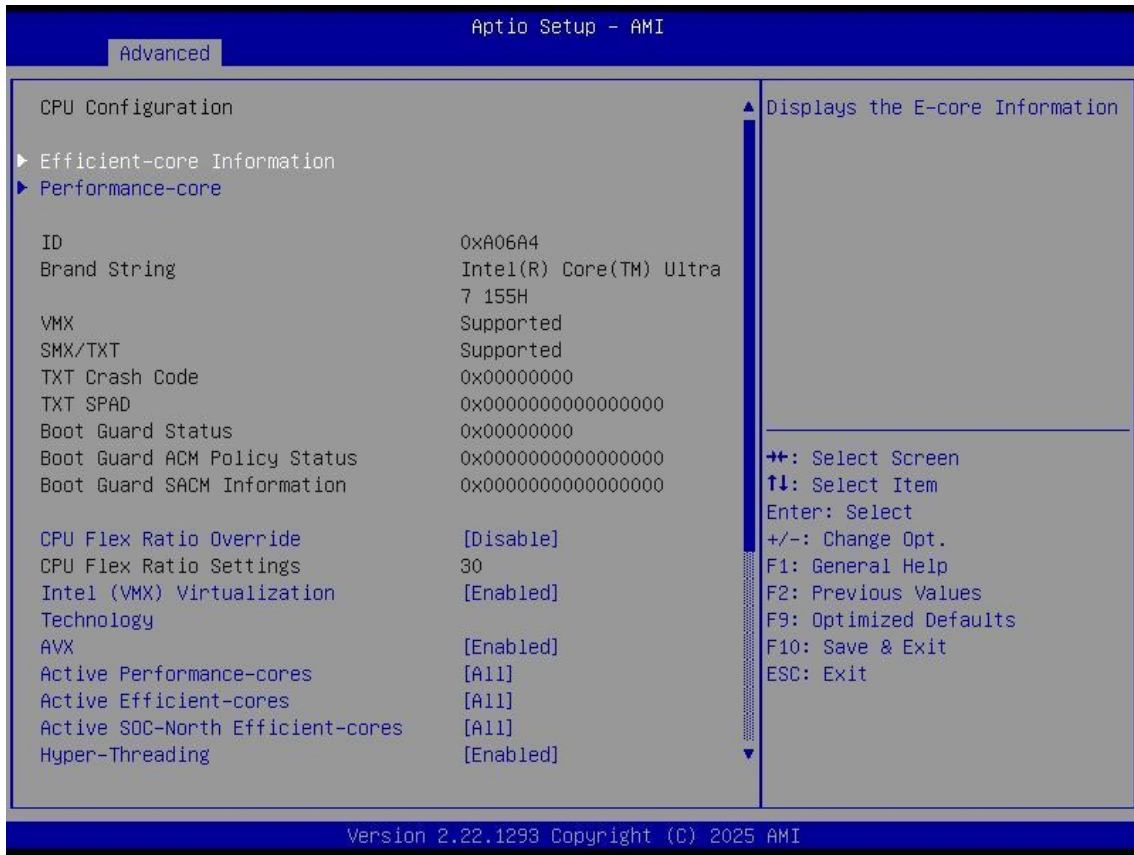

Power & Performance

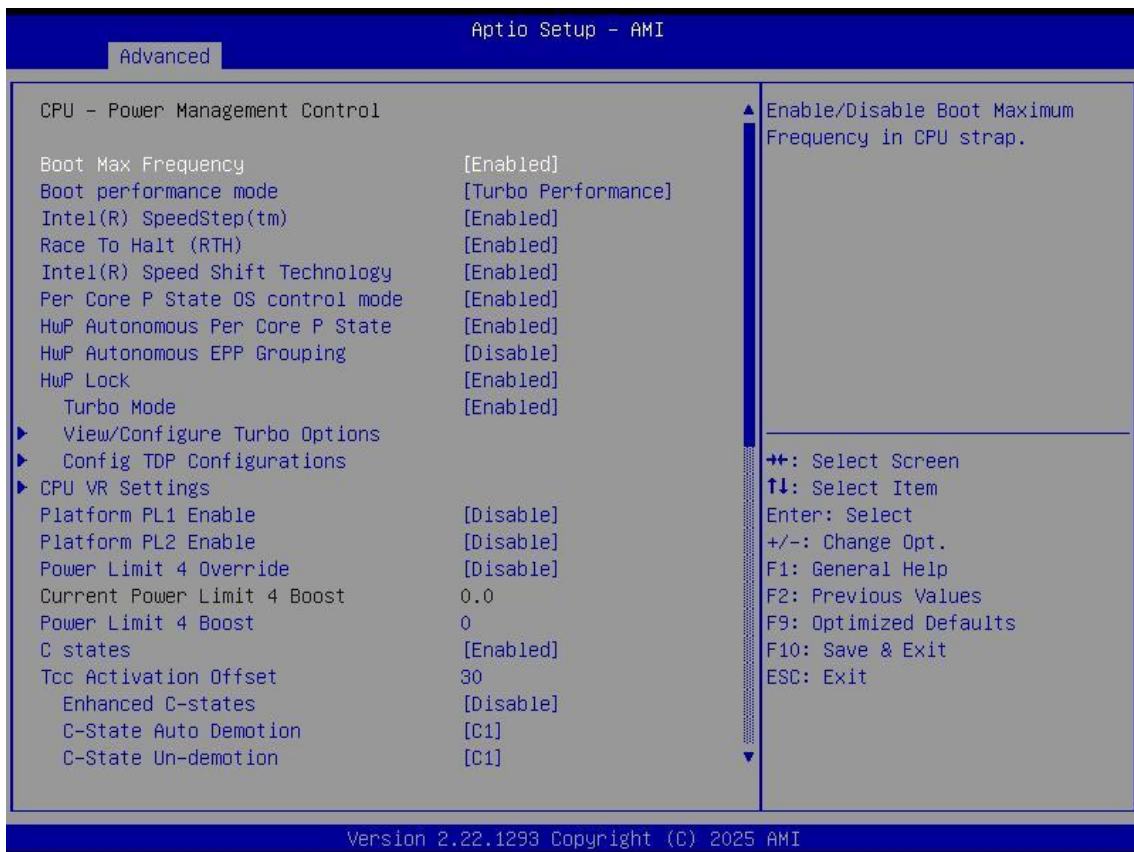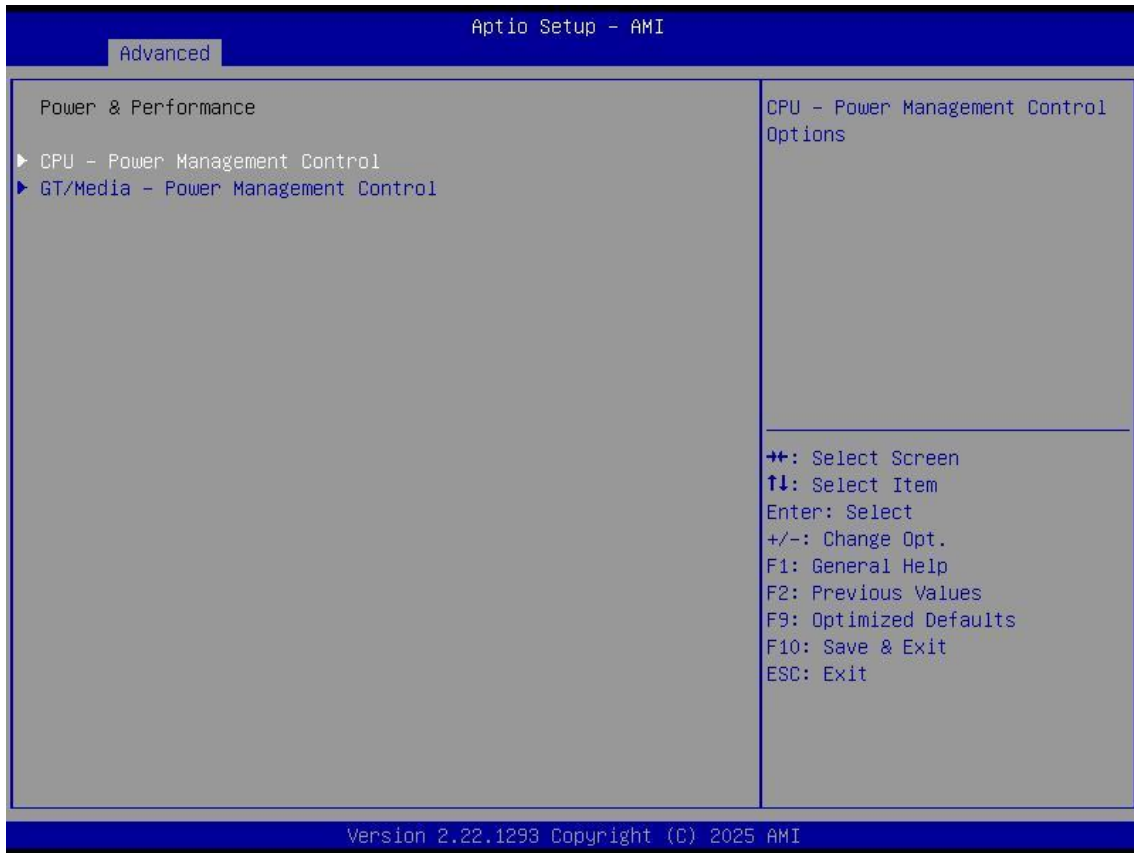

Aptio Setup - AMI


Advanced

GT/Media - Power Management Control		Check to enable render standby support.
RC6(Render Standby)	[Enabled]	
MC6(Media Standby)	[Enabled]	
Maximum GT frequency	[Default Max Frequency]	
Disable Turbo GT frequency	[Disabled]	


++: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F9: Optimized Defaults
F10: Save & Exit
ESC: Exit

Version 2.22.1293 Copyright (C) 2025 AMI



System Agent (SA) Configuration


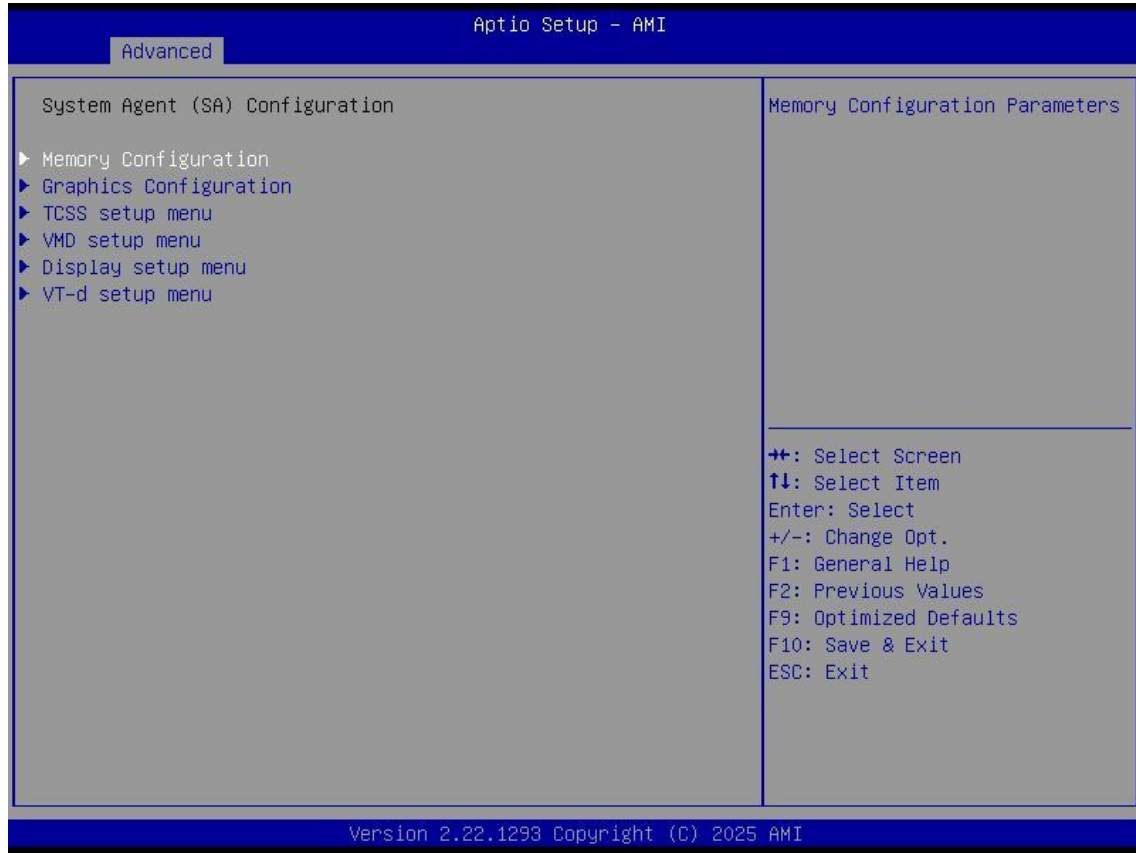


PCIe Configuration

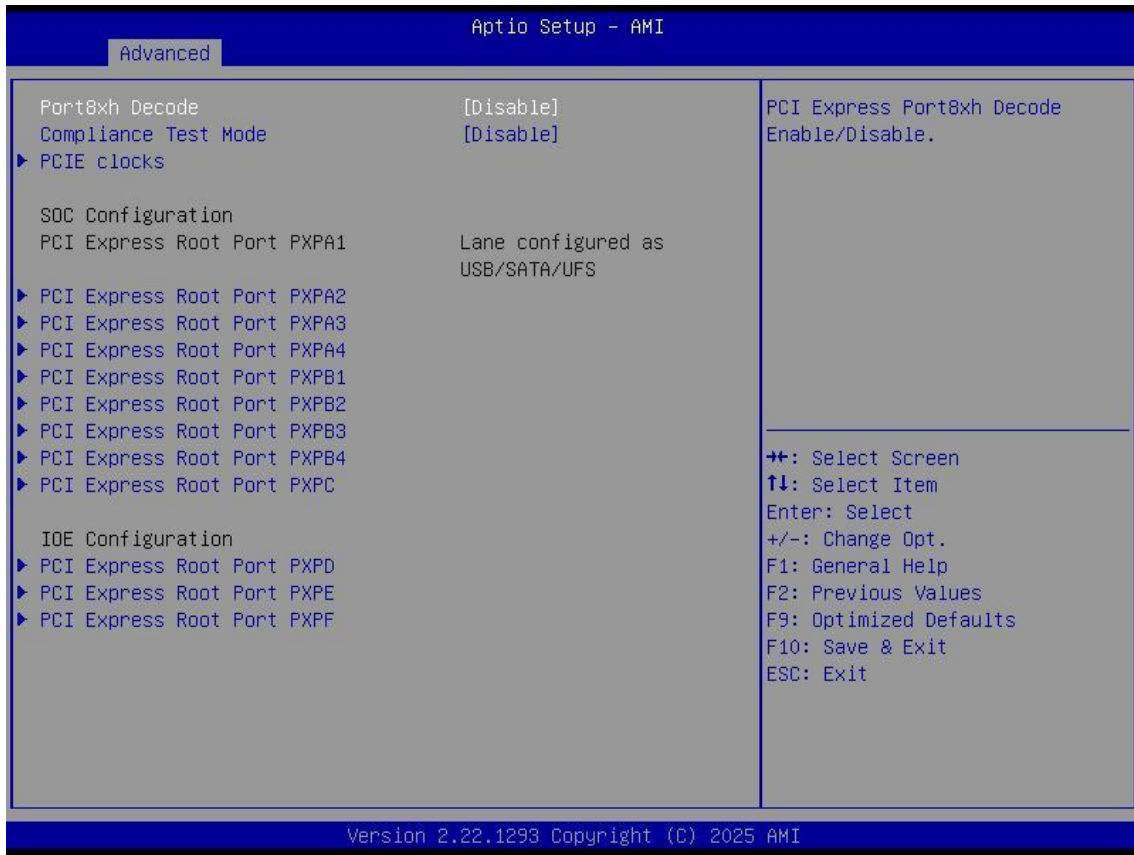

PCH-IO Configuration

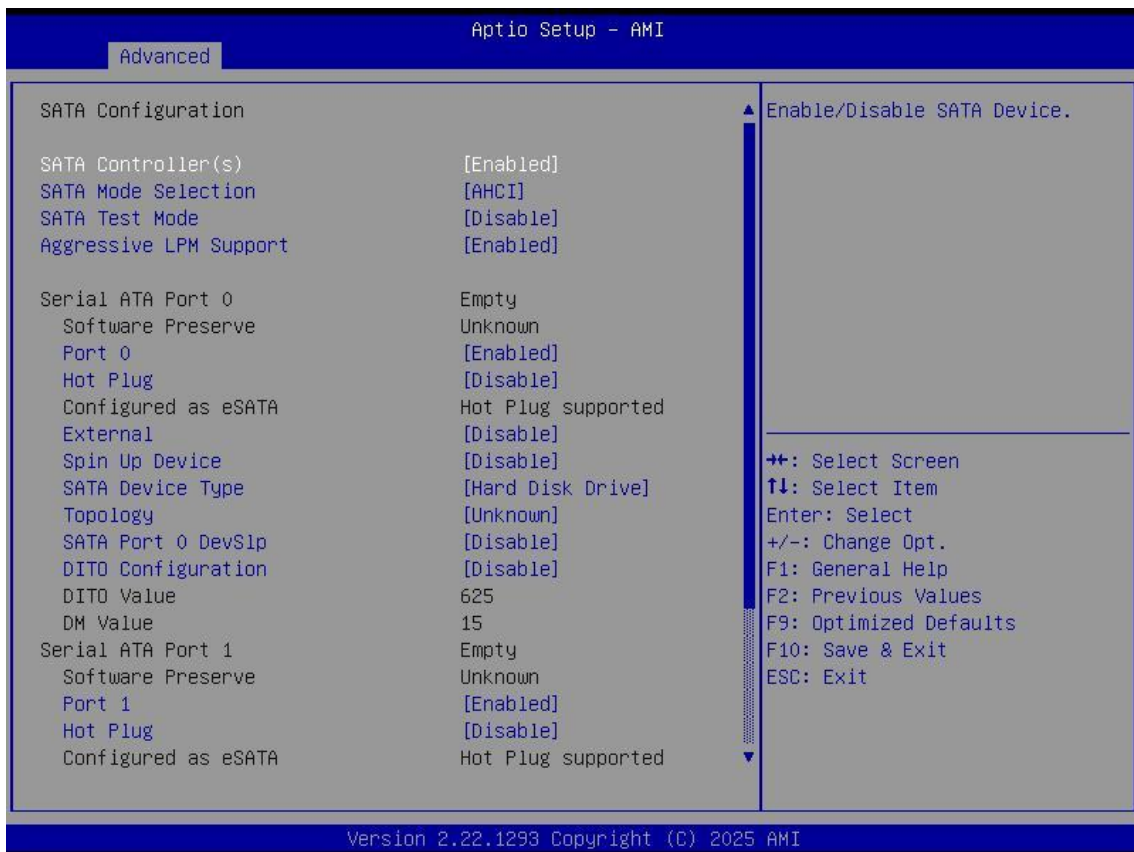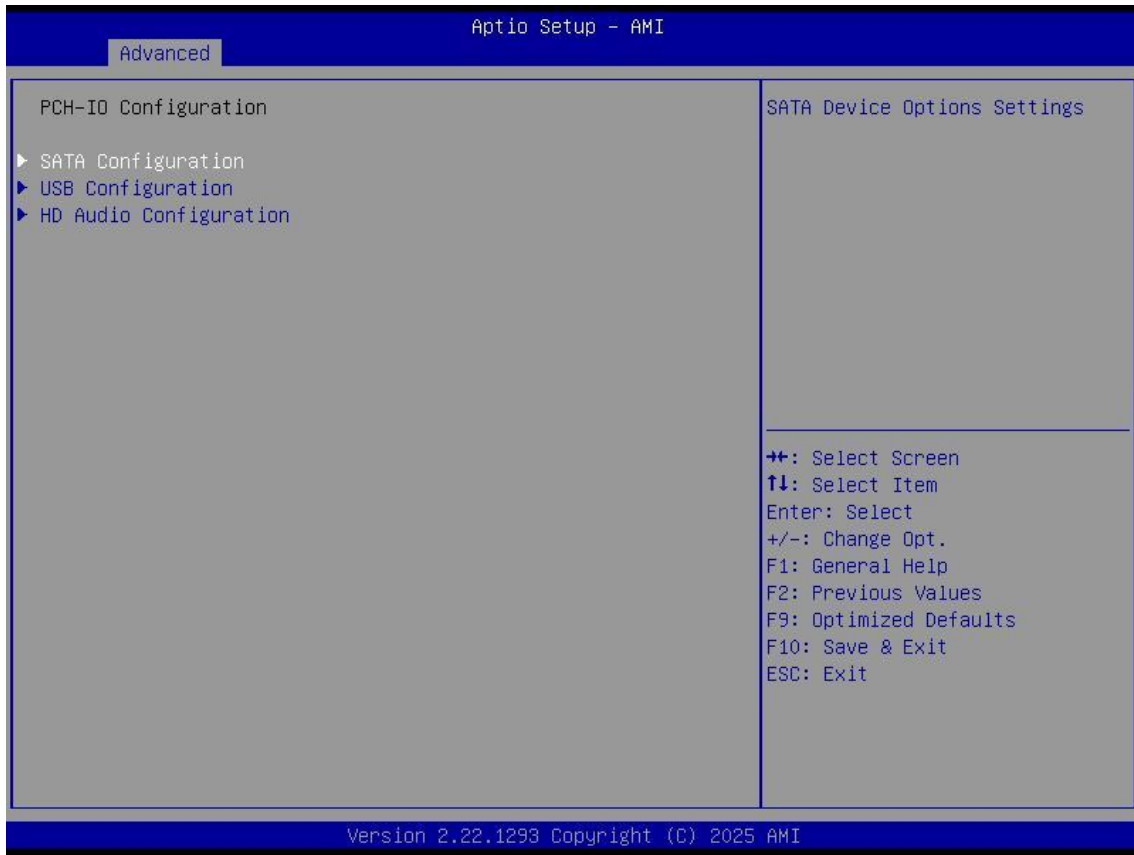

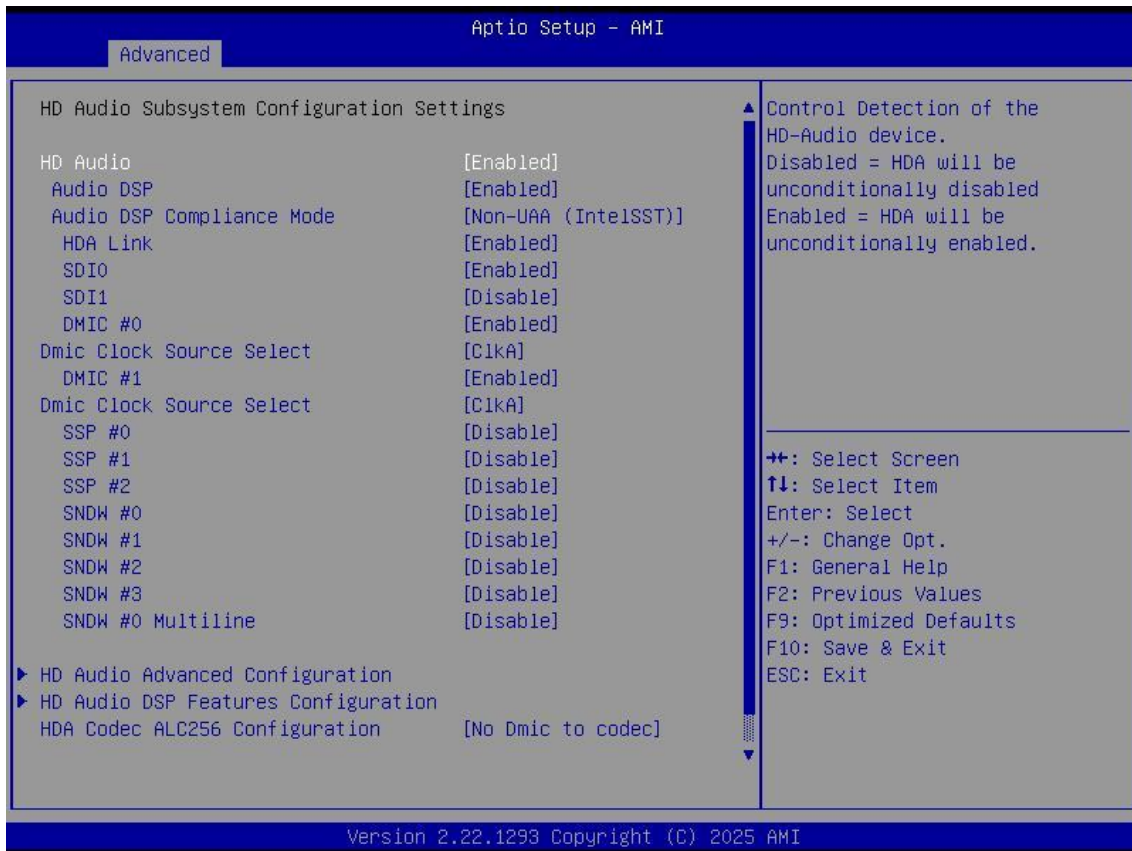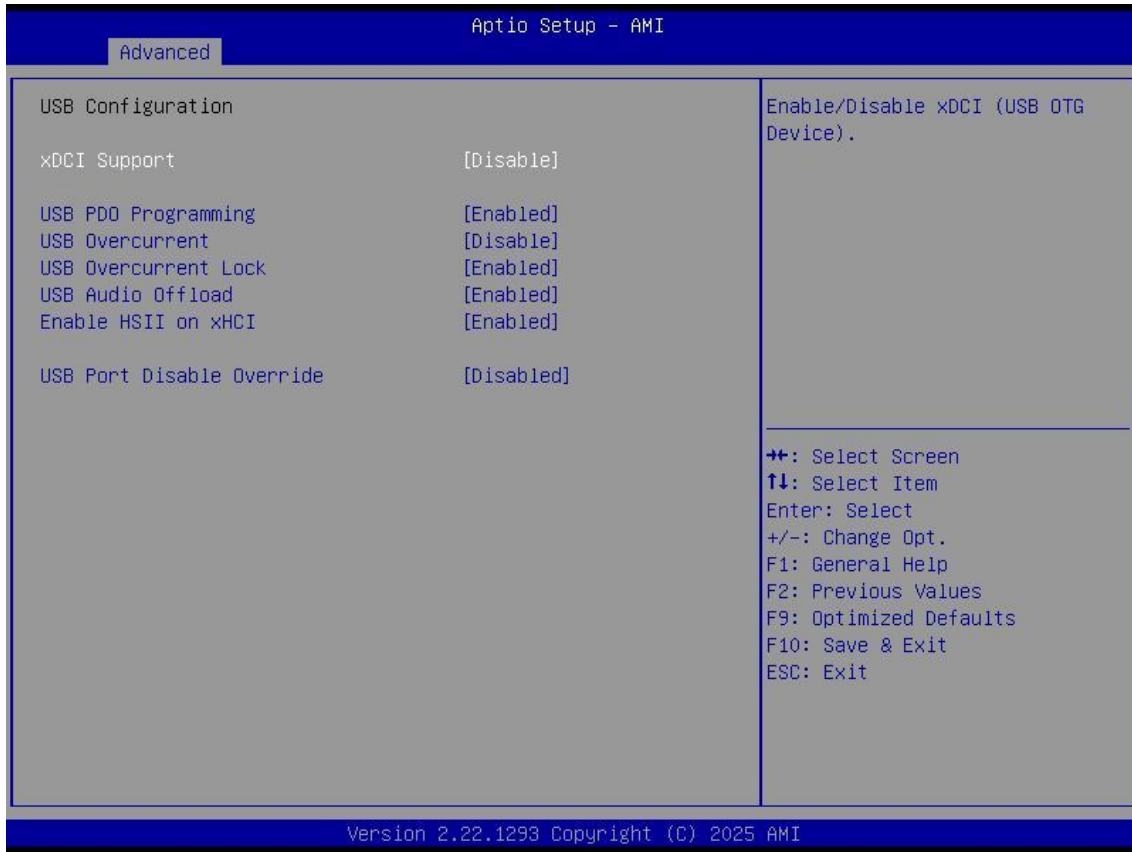

PCH-FW Configuration

Advanced		Aptio Setup - AMI
ME Firmware Version	18.0.5.2066	When Disabled ME will not be unconfigured on RTC Clear
ME Firmware Mode	Normal Mode	
ME Firmware SKU	Consumer SKU	
ME Firmware Status 1	0x90000255	
ME Firmware Status 2	0x69000100	
ME Firmware Status 3	0x00000020	
ME Firmware Status 4	0x00000000	
ME Firmware Status 5	0x02600000	
ME Firmware Status 6	0x00000000	
ME State	[Enabled]	
ME Unconfig on RTC Clear	[Enabled]	
Core Bios Done Message	[Enabled]	
CSE Data Resilience Support	[Enabled]	
TPM Device Selection	[PTT]	
▶ Firmware Update Configuration		
▶ FIPS Configuration		
▶ ME Debug Configuration		
▶ Anti-Rollback SVN Configuration		
Extend CSME Measurement to TPM-PCR	[Disable]	

Version 2.22.1293 Copyright (C) 2025 AMI

Trusted Computing

Advanced		Aptio Setup - AMI
TPM 2.0 Device Found		Enables or Disables BIOS support for security device. O.S. will not show Security Device. TCG EFI protocol and INT1A interface will not be available.
Firmware Version:	700.19	
Vendor:	INTC	
Security Device Support	[Enable]	
Active PCR banks	SHA256	
Available PCR banks	SHA256,SHA384,SM3	
SHA256 PCR Bank	[Enabled]	
SHA384 PCR Bank	[Disabled]	
SM3_256 PCR Bank	[Disabled]	
Pending operation	[None]	
Platform Hierarchy	[Enabled]	
Storage Hierarchy	[Enabled]	
Endorsement Hierarchy	[Enabled]	
Physical Presence Spec Version	[1.3]	
TPM 2.0 InterfaceType	[CRB]	
Device Select	[Auto]	

Version 2.22.1293 Copyright (C) 2025 AMI

IT8613 Super IO Configuration

Advanced		Aptio Setup - AMI
IT8613 Super IO Configuration		Specify what state to go to when power is re-applied after a power failure (G3 state).
Super IO Chip	IT8613	
Restore AC Power Loss By IO	[Power Off]	++: Select Screen ↑↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F9: Optimized Defaults F10: Save & Exit ESC: Exit
Version 2.22.1293 Copyright (C) 2025 AMI		

Hardware Monitor

The screenshot displays the 'Advanced' menu of the Aptio Setup - AMI utility. The 'Pc Health Status' section shows the following data:


Parameter	Value
CPU temperature	: +61 C
SYS temperature	: +13 C
SYS2 temperature	: +51 C
CPU FAN Speed	: N/A
SYS FAN Speed	: N/A

The 'Smart Fan Function' section is currently expanded, showing a list of keyboard shortcuts for navigation and configuration:

- ⇧: Select Screen
- ⇩: Select Item
- Enter: Select
- +/-: Change Opt.
- F1: General Help
- F2: Previous Values
- F9: Optimized Defaults
- F10: Save & Exit
- ESC: Exit

At the bottom of the screen, the version information is displayed: Version 2.22.1293 Copyright (C) 2025 AMI.

Serial Port Console Redirection

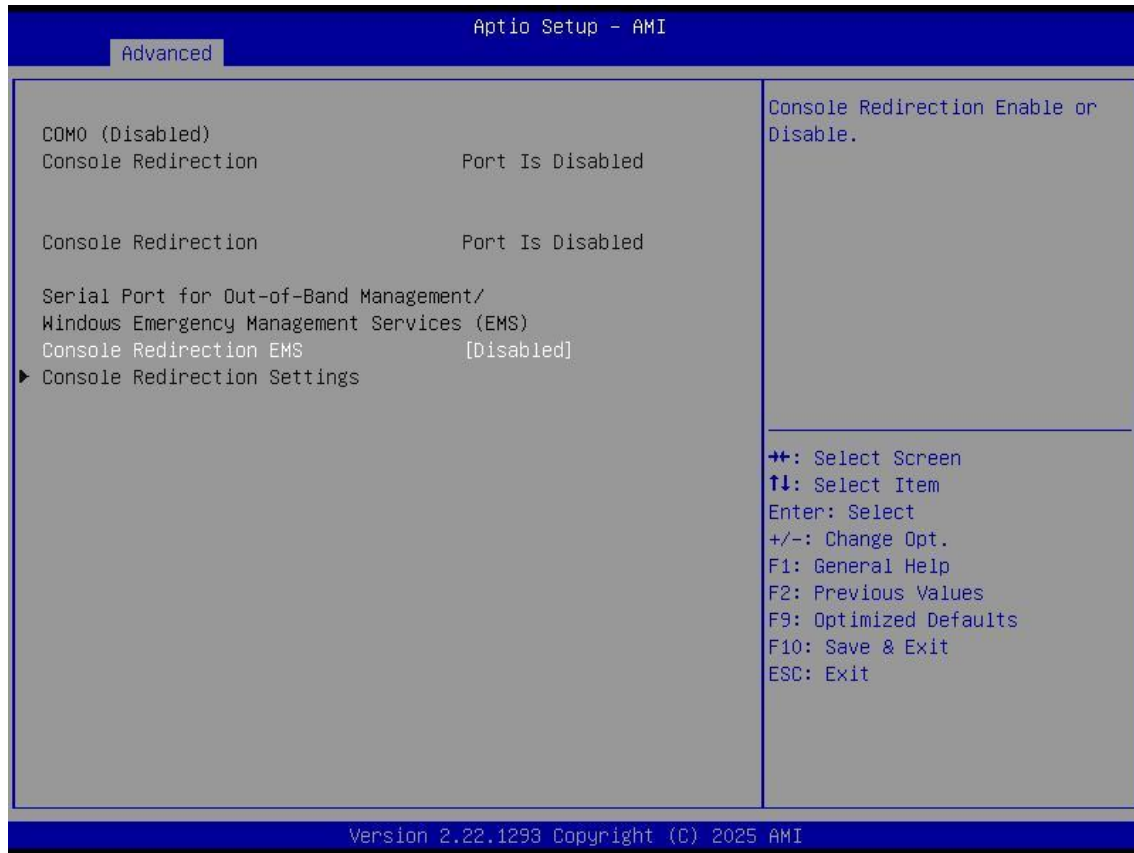


USB Configuration


Advanced		Aptio Setup - AMI
USB Configuration		This is a workaround for OSes without XHCI hand-off support. The XHCI ownership change should be claimed by XHCI driver.
USB Module Version	35	
USB Controllers: 2 XHCIs		
USB Devices: 1 Drive, 1 Keyboard, 1 Mouse		
XHCI Hand-off	[Enabled]	
USB Mass Storage Driver Support	[Enabled]	
USB hardware delays and time-outs:		
USB transfer time-out	[20 sec]	++: Select Screen ↑↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F9: Optimized Defaults F10: Save & Exit ESC: Exit
Device reset time-out	[20 sec]	
Device power-up delay	[Auto]	
Mass Storage Devices:		
KingstonDataTraveler 3.0	[Auto]	

Version 2.22.1293 Copyright (C) 2025 AMI


Network Configuration

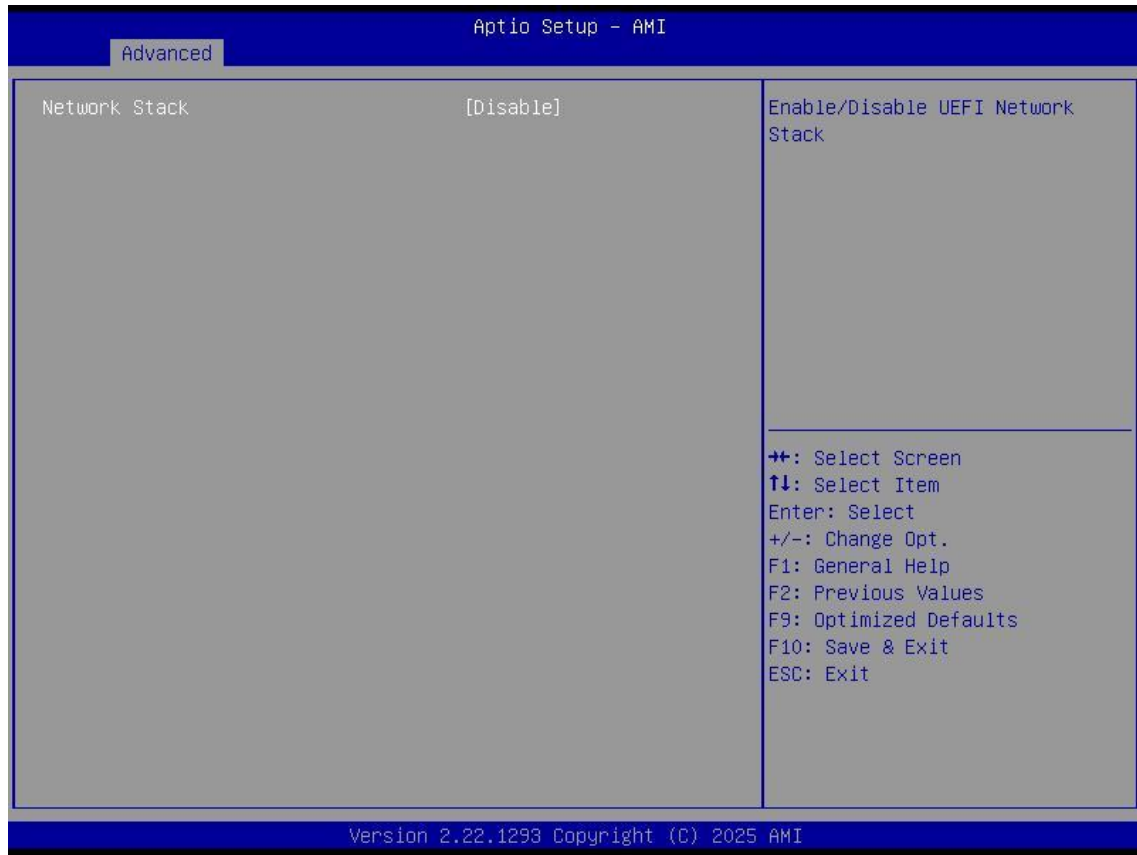


Nvme Configuration

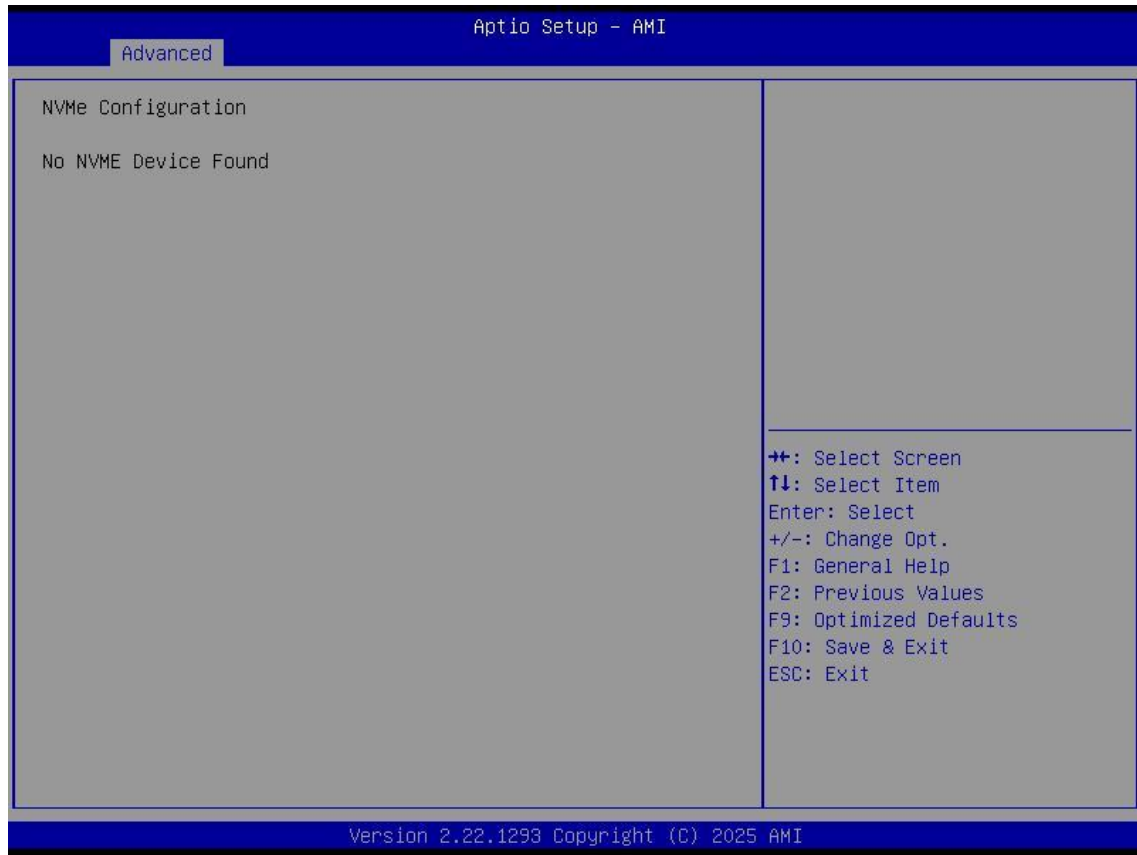

Security

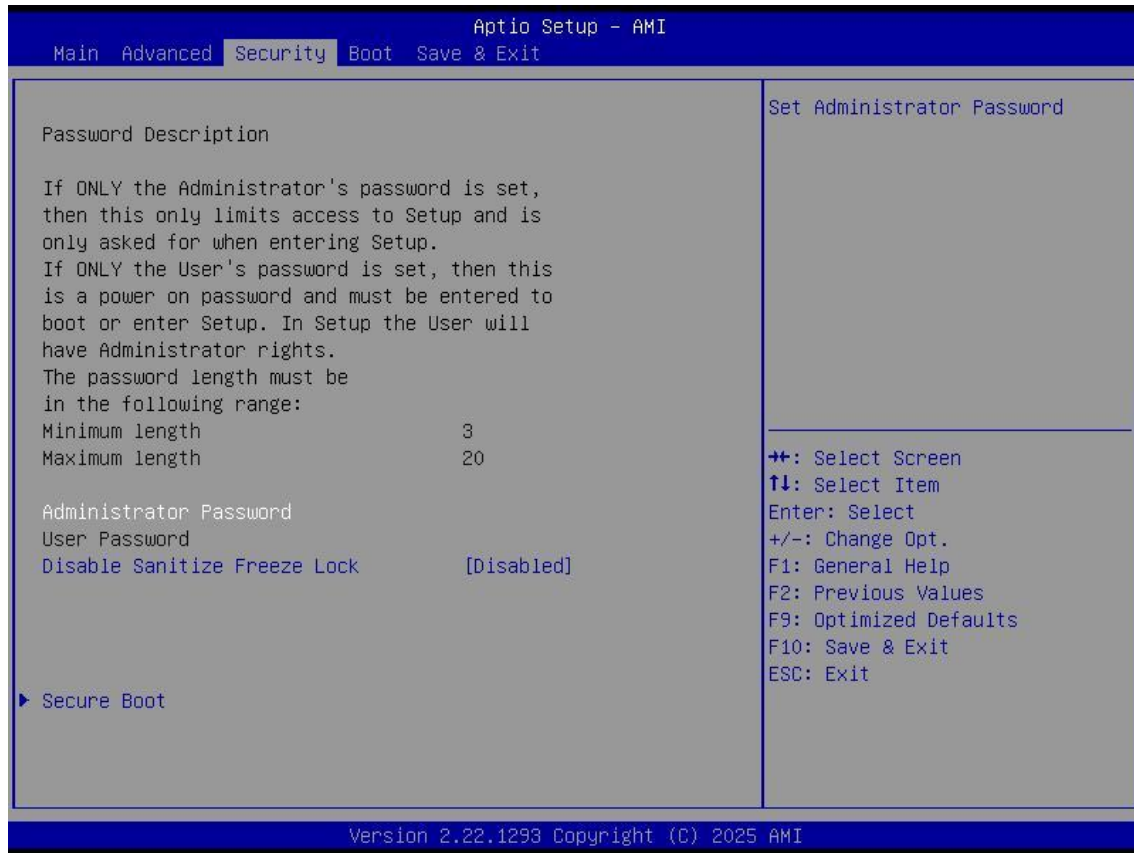

Boot Settings

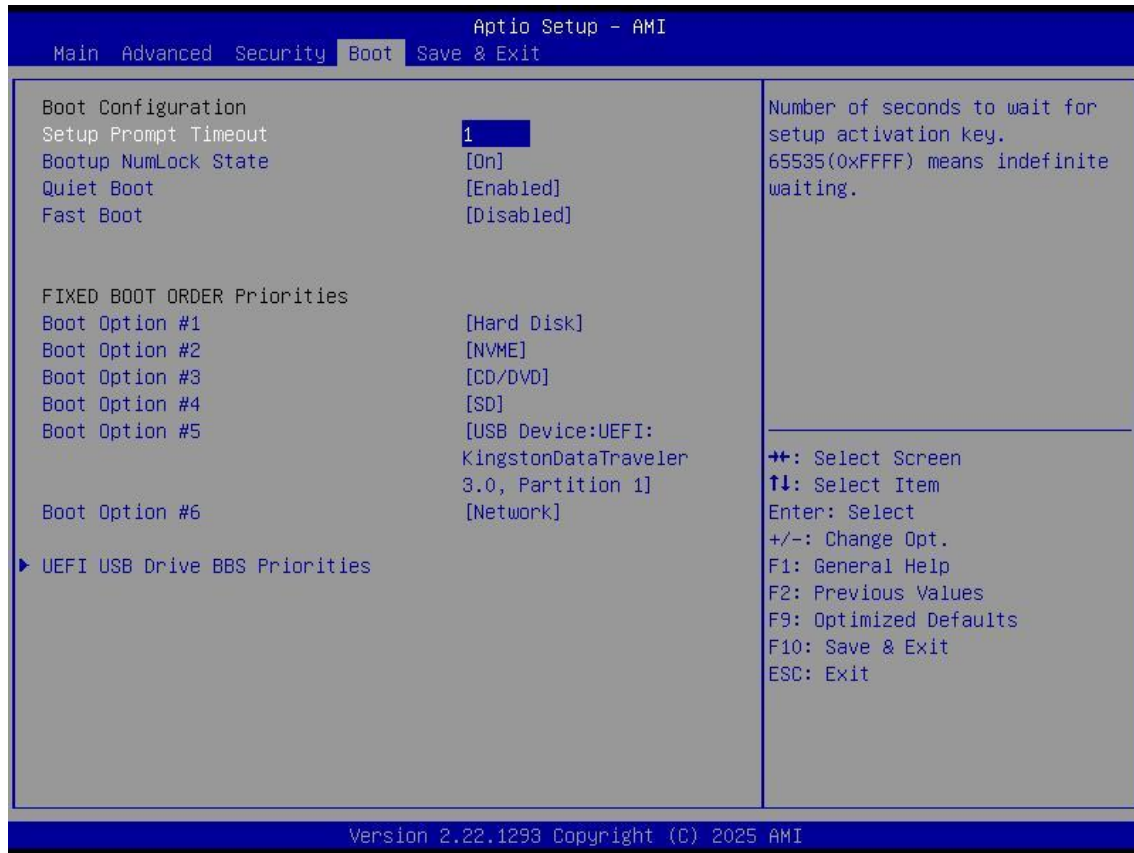

[Setup Prompt Timeout]

This option is used to set the length of time the POST interface stays on.


[Bootup Numlock State]

This option is used to set the state of Numlock after the system starts. When set to On, NumLock will be turned on after the system starts, and the numeric keys on the keypad will be valid. When set to Off, Numlock will be turned off after the system starts, and the direction keys on the keypad will be valid.

[Fast boot]

This option is used to set fast boot. Options: Disabled, Enabled

Save&Exit Settings

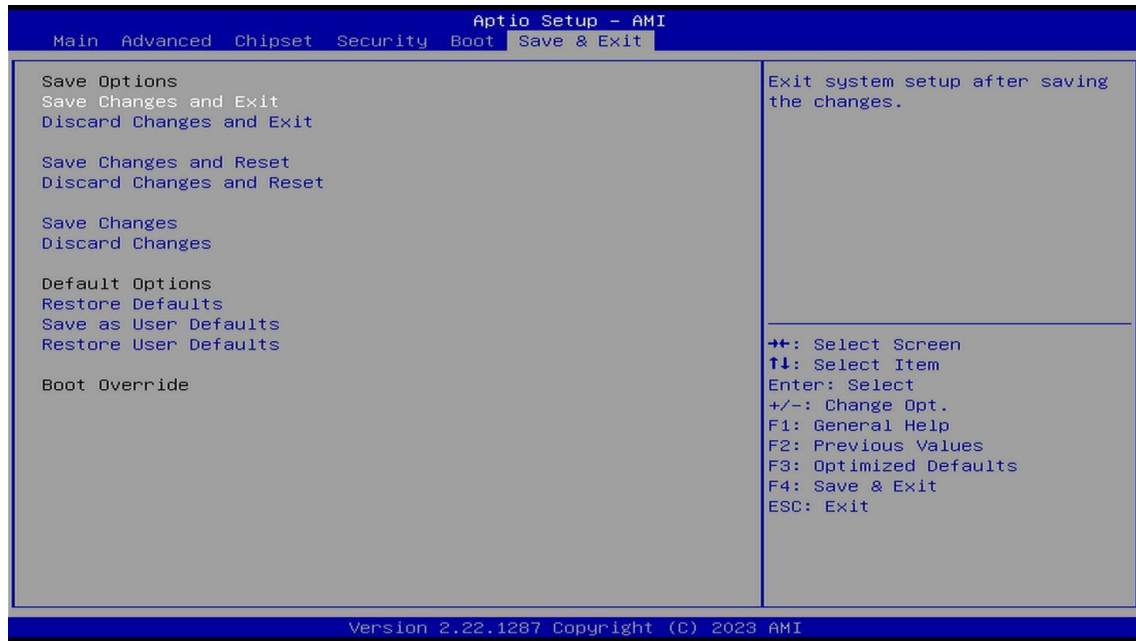

Common fault analysis and solutions

We have compiled some frequently asked questions for your reference. Please check <https://bkminipc.com/frequently-asked-questions-and-answers/>

Error	Inspection Method
Unable to start after power on	<p>Make sure the power cord is properly connected.</p> <p>Make sure that the power supply you are using meets the power supply requirements of the motherboard.</p> <p>Try to reinsert the Memory Stick.</p> <p>Try to replace the Memory Stick.</p> <p>Try to clear the CMOS of the main board.</p> <p>Please confirm if there is an external expansion card and if it is normal after removing the external card.</p>
Unable to display after power on	<p>Make sure the monitor is turned on.</p> <p>Make sure the monitor and host power cables are properly connected. Make sure the monitor and host cables are properly connected.</p> <p>Check to see if the monitor is in "Sleep" mode.</p> <p>Try changing the monitor interface or replacing the monitor.</p>
BIOS Setup cannot be saved	<p>Check that the CMOS battery is installed</p> <p>Try to replace the CMOS battery (CR2032)</p> <p>Adjust the time and date in BIOS setup</p>
Unable to find a bootable device	<p>Make sure the drive's power and data cables are properly connected.</p> <p>Make sure the operating system is installed on the drive.</p> <p>Make sure the hard drive is not physically damaged.</p>
Blue screen or freeze when logging on to the system	<p>Check if the Memory Stick and External Card are loose.</p> <p>Try removing the newly installed hardware and uninstalling the newly installed driver or software.</p> <p>Try replacing the memory with a different specification.</p>
Slow entry into the operating system	<p>Check if the CPU cooling fan is running normally.</p> <p>Check if the remaining space of the system partition is insufficient.</p> <p>Use software to check for bad sectors on the hard drive.</p>
System restarts automatically	<p>Confirm that the CPU cooling fan is rotating normally.</p> <p>Confirm that the switch/reset button has not been accidentally touched.</p> <p>Confirm that the Memory Stick and external card are loose.</p> <p>Confirm that the power supply has sufficient load capacity, try to replace the power supply</p> <p>Check if the system is infected with viruses.</p>
Unable to detect USB device	<p>Confirm that the USB device requires separate power.</p> <p>Confirm that the USB interface has poor contact.</p> <p>Confirm that the USB controller is enabled in the BIOS setup.</p>

Useful Links

Submit your suggestions and ideas in the community	https://www.reddit.com/r/bkminipc/	
Watch our new product demos	https://www.youtube.com/@BKHD-PCs	
Corporate News and Cooperation	https://www.linkedin.com/company/beikong/	
Get our latest news on Meta	https://www.facebook.com/people/%E5%80%8D%E6%8E%A7/61558406109357/	